


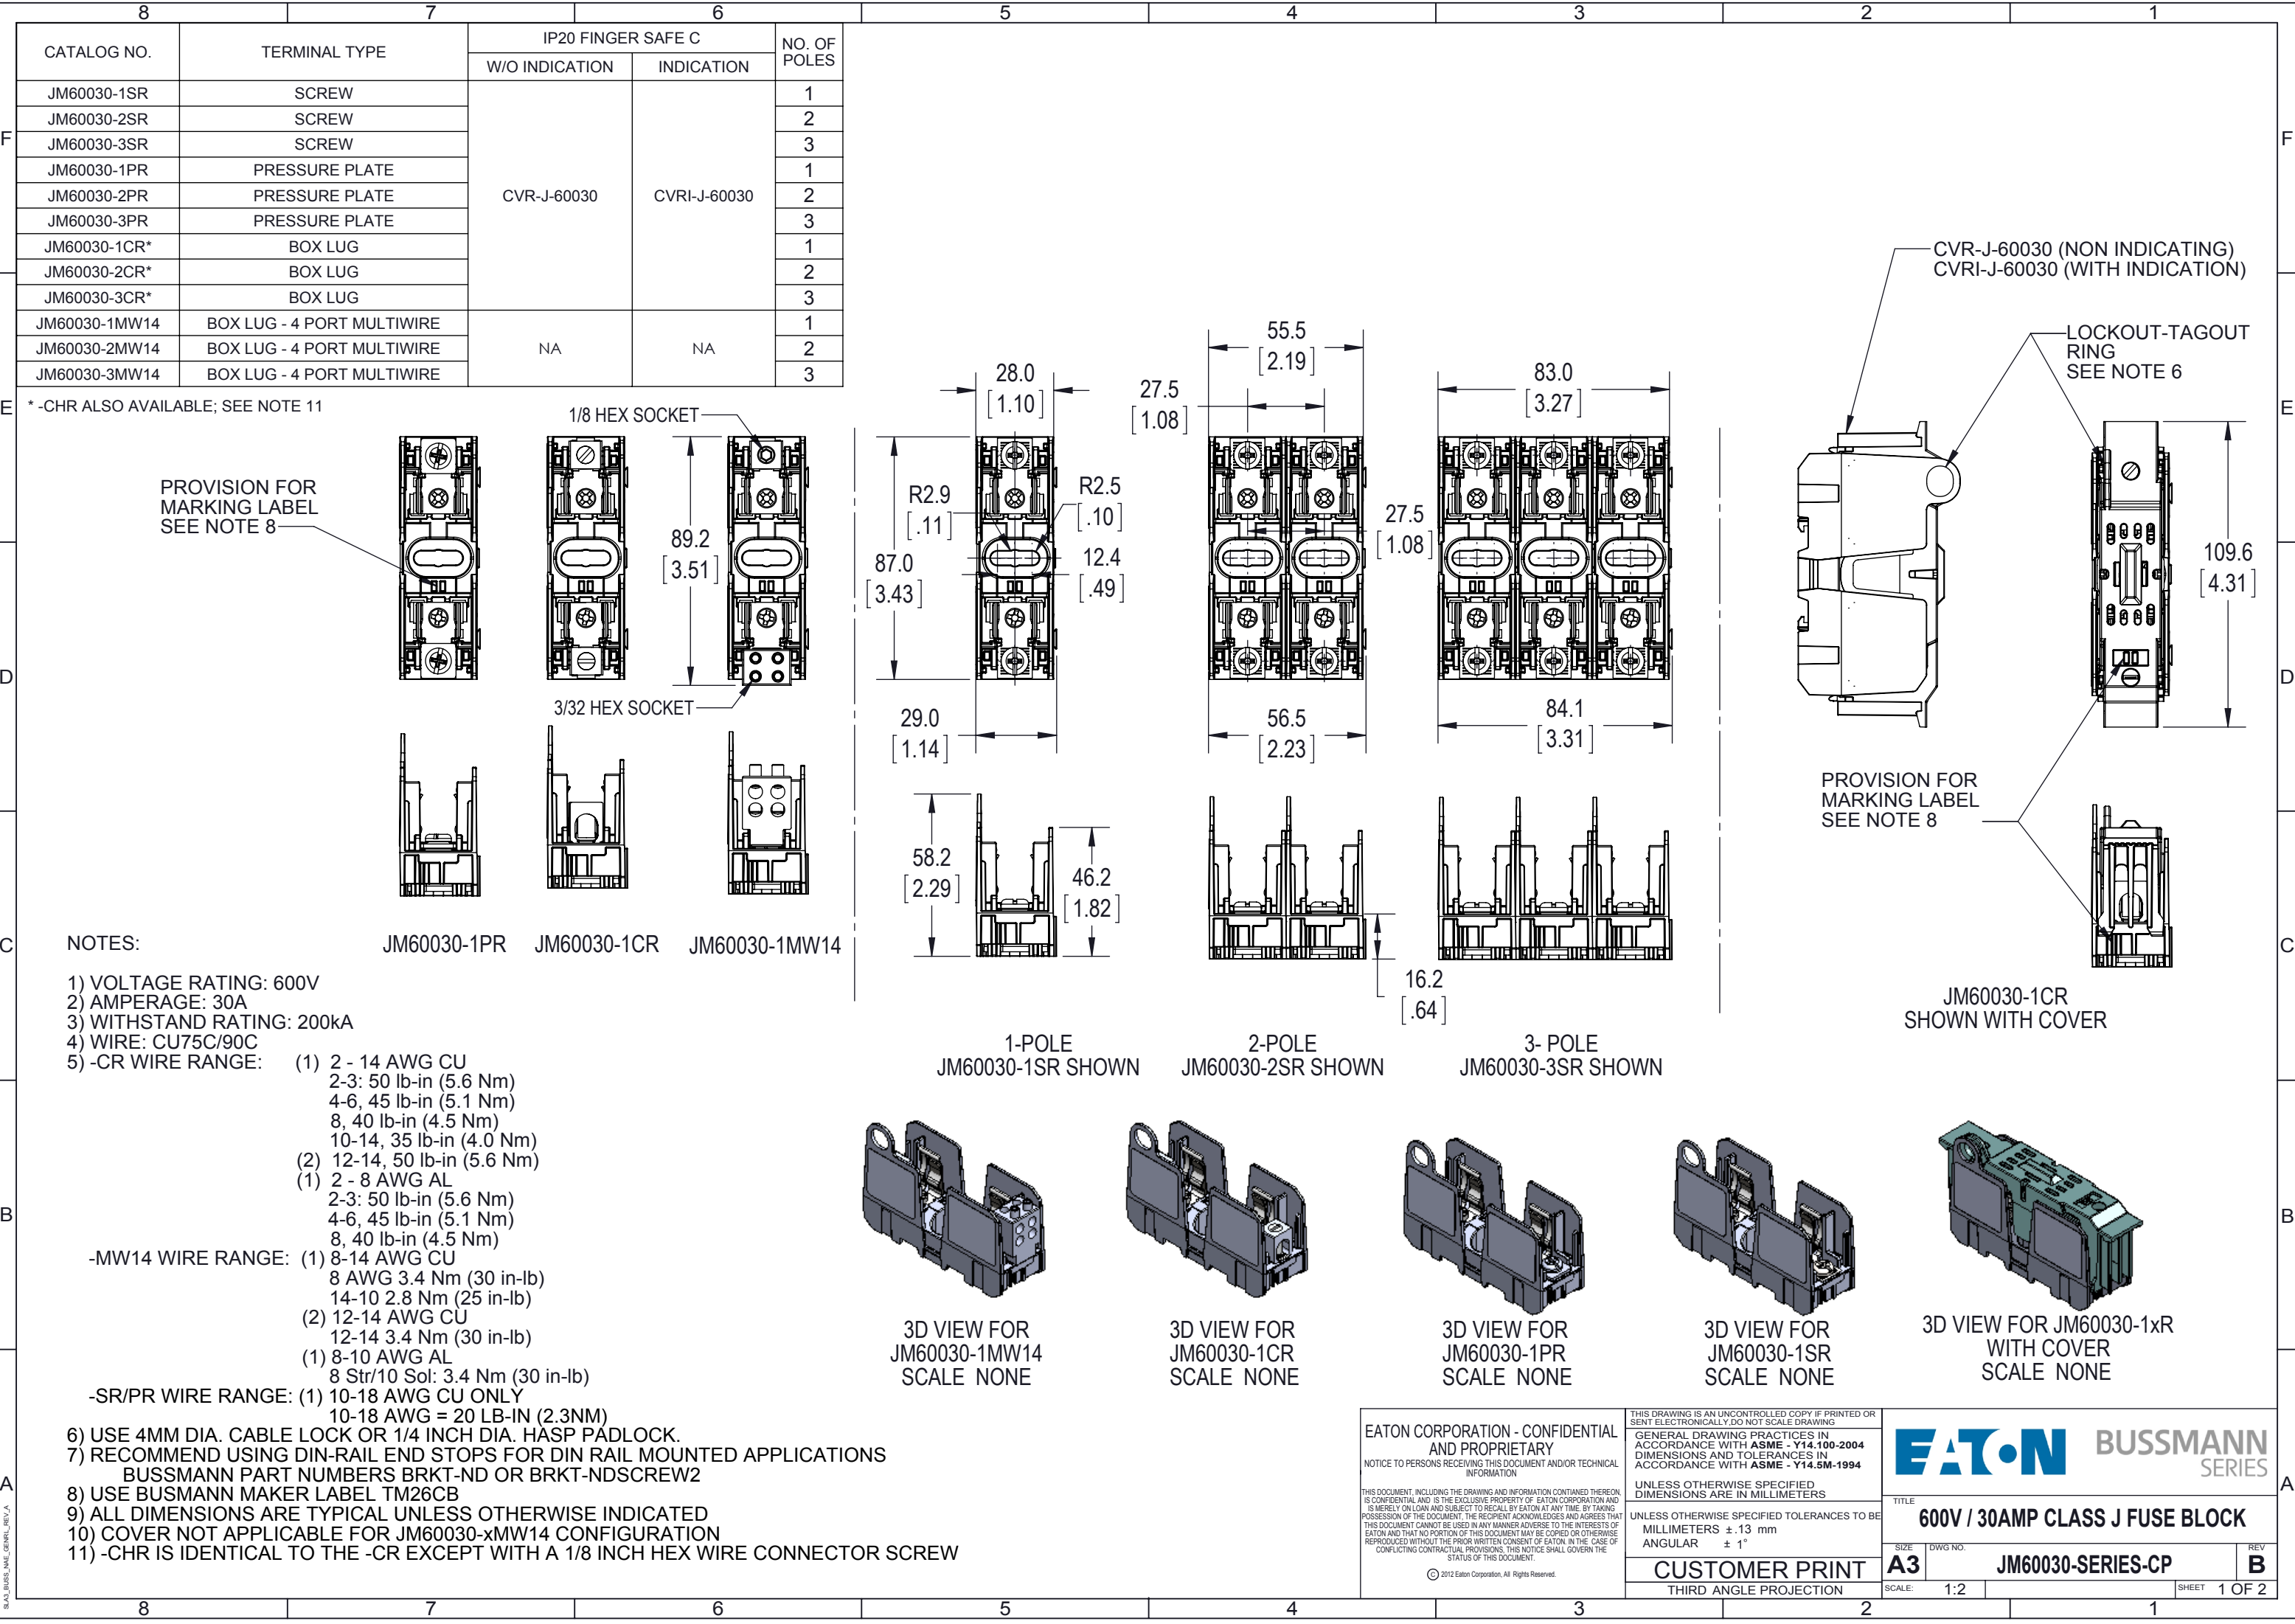
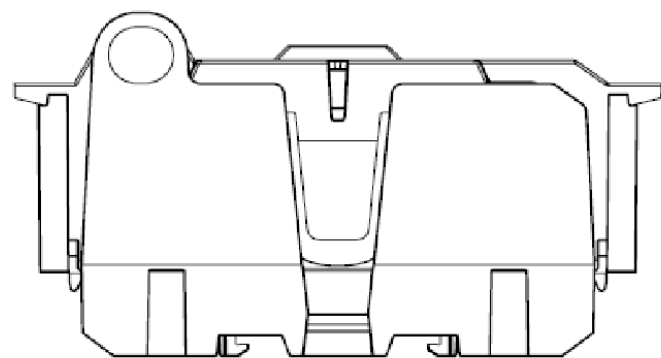


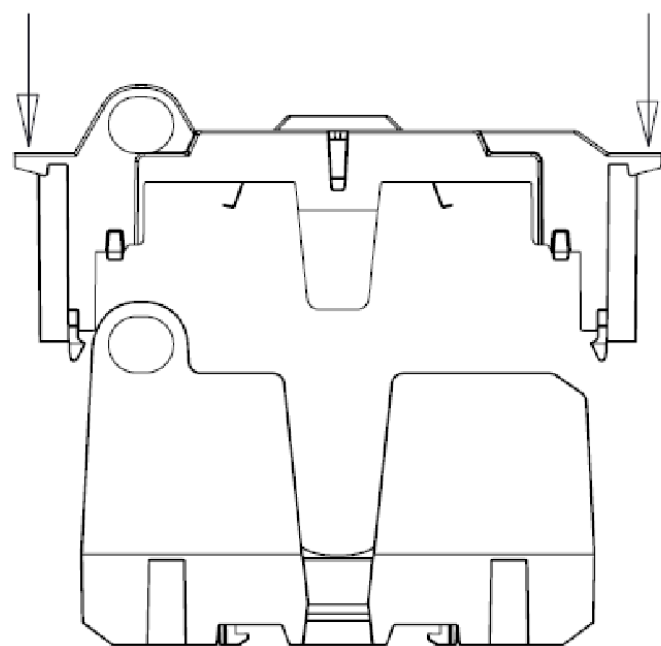

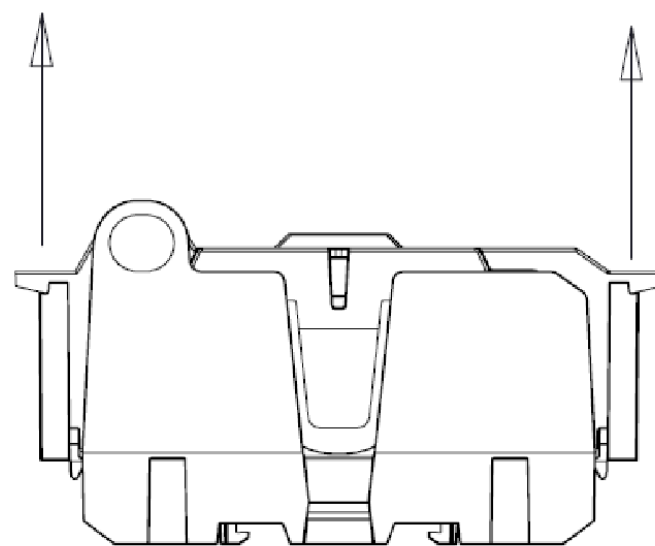


CLOSING
PUSH STRAIGHT DOWN UNTIL SNAPS CLICK
INTO PLACE


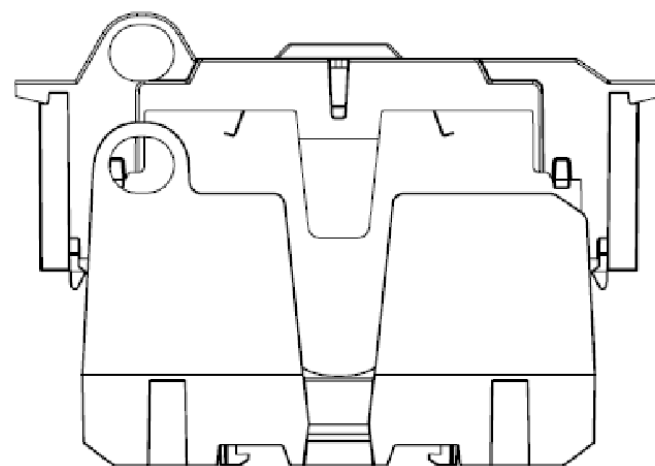


OPENING
PULL STRAIGHT UP AT BOTH OUTSIDE
HANDLES

CUT COVER TAB
AT NOTCH FOR USE
WITH WIRES LARGER
THAN 8 AWG

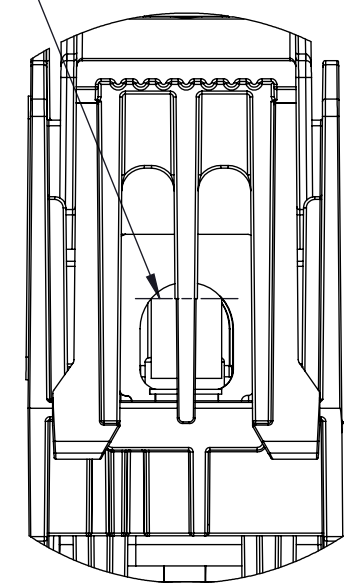


DETAIL A
SCALE 1.5 : 1

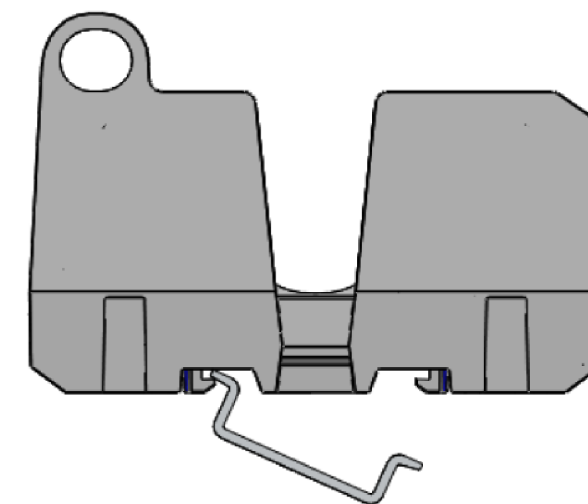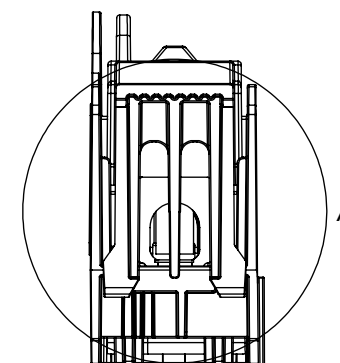

1. HOOK DIN RAIL SNAPS ON ONE SIDE OF THE DIN RAIL

2. PUSH DOWN TO DEFLECT THE SNAPS

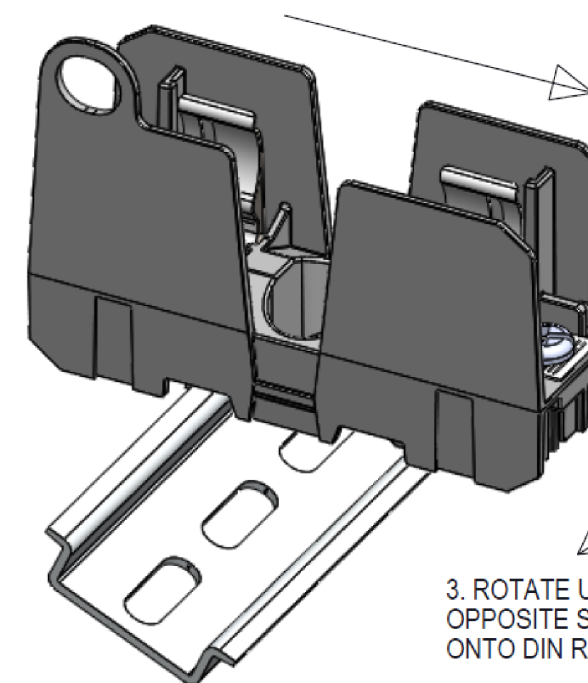

3. ROTATE UNTIL THE
OPPOSITE SIDE SNAPS
ONTO DIN RAIL

INSTALLATION ON DIN RAIL
END STOPS MAY BE NECESSARY FOR SOME
ASSEMBLY CONDITIONS - SEE NOTE 7

EAT•N BUSSMANN
SERIES

TITLE
600V / 30AMP CLASS J FUSE BLOCK

SIZE DWG NO. REV
A3 **JM60030-SERIES-CP** **B**

SCALE: 4:5 SHEET 2 OF 2