

Fuse holders and blocks

Modular knifeblade fuse blocks part number table



250V Class R and H(K)



600V Class R and H(K)



Class J

Catalog number		Covers*		Volts	Fuse range (amps)	Number of poles	Wire range (solid and stranded)***	Wire range (fine stranded Cu)	Torque N•m (Lb-In)	Bussmann series fuses	
Class H(K)	Class R	w/o indication	w/ indication								
HM25100-1CR	RM25100-1CR	CVR-RH-25100	CVRI-RH-25100	250	70-100	1	– 1/0-3 AWG; (2) Cu 4-6 AWG	1-3 AWG 4-6 AWG	6.2 (55) 5.6 (50)	Class H(K): NON, CDN, PON	
HM25100-2CR	RM25100-2CR					2	4-6 AWG; (2) Cu 8 AWG	8 AWG	5.1 (45)		
HM25100-3CR	RM25100-3CR					3	8 AWG; (2) Cu 10-14 AWG Cu 10-14 AWG; Al 10-12 AWG	– –	4.5 (40) 4.0 (35)		
HM25200-1CR	RM25200-1CR	CVR-RH-25200	CVRI-RH-25200		110-200	1	250 MCM-1 AWG	3/0-1 AWG	42 (375)	Class R: LPN-RK_SP LPN-RK_SPI** FRN-R KTN-R	
HM25200-2CR	RM25200-2CR					2	2-6 AWG; (2) Cu 2-6 AWG	2-6 AWG	31 (275)		
HM25200-3CR	RM25200-3CR					3					
HM25400-1CR	RM25400-1CR	CVR-RH-25400	CVRI-RH-25400		225-400	1	600kcmil	N/A	57 (500)		
HM25400-2CR	RM25400-2CR					2	500kcmil-4 AWG (2) Cu 3/0 - 4 AWG		51 (450)		
HM25400-3CR	RM25400-3CR					3	(2) Al 3/0 - 4 AWG		57 (500) 34 (300)		
HM25600-1CR	RM25600-1CR	CVR-RH-25600	CVRI-RH-25600		450-600	1	(2) 500kcmil-4 AWG	N/A	51 (450)		
HM25600-2CR	RM25600-2CR					2					
HM25600-3CR	RM25600-3CR					3					
HM60100-1CR	RM60100-1CR	CVR-RH-60100	CVRI-RH-60100	600	70-100	1	– 1/0-3 AWG; (2) Cu 4-6 AWG	1-3 AWG 4-6 AWG	6.2 (55) 5.6 (50)	Class H(K): NOS, CDS	
HM60100-2CR	RM60100-2CR					2	4-6 AWG; (2) Cu 8 AWG	8 AWG	5.1 (45)		
HM60100-3CR	RM60100-3CR					3	8 AWG; (2) Cu 10-14 AWG Cu 10-14 AWG; Al 10-12 AWG	– –	4.5 (40) 4.0 (35)		
HM60200-1CR	RM60200-1CR	CVR-RH-60200	CVRI-RH-60200		110-200	1	250 MCM-1 AWG	3/0-1 AWG	42 (375)	Class R: LPS-RK_SP LPS-RK_SPI** FRS-R KTS-R KWS-R PVS-R	
HM60200-2CR	RM60200-2CR					2	2-6 AWG; (2) Cu 2-6 AWG	2-6 AWG	31 (275)		
HM60200-3CR	RM60200-3CR					3					
HM60400-1CR	RM60400-1CR	CVR-RH-60400	CVRI-RH-60400		225-400	1	600kcmil	N/A	57 (500)		
HM60400-2CR	RM60400-2CR					2	500kcmil-4 AWG (2) Cu 3/0 - 4 AWG		51 (450)		
HM60400-3CR	RM60400-3CR					3	(2) Al 3/0 - 4 AWG		57 (500) 34 (300)		
HM60600-1CR	RM60600-1CR	CVR-RH-60600	CVRI-RH-60600		450-600	1	(2) 500kcmil-4 AWG	N/A	51 (450)		
HM60600-2CR	RM60600-2CR					2					
HM60600-3CR	RM60600-3CR					3					

Catalog number	Covers*		Volts	Fuse range (amps)	Number of poles	Wire range (solid and stranded)***	Wire range (fine stranded)	Torque N•m (Lb-In)	Bussmann series fuses	
Class J	w/o indication	w/ indication								
JM60100-1CR	CVR-J-60100-M	CVRI-J-60100-M	600	70-100	1	–	1-3 AWG	6.2 (55)	LPJ_SP LPJ_SPI** JKS DFJ	
JM60100-2CR					2	1/0-3 AWG; (2) Cu 4-6 AWG	4-6 AWG	5.6 (50)		
JM60100-3CR					3	4-6 AWG; (2) Cu 8 AWG	8 AWG	5.1 (45)		
JM60200-1CR	CVR-J-60200-M	CVRI-J-60200-M		110-200	1	8 AWG; (2) Cu 10-14 AWG	–	4.5 (40)		
JM60200-2CR					2	Cu 10-14 AWG; Al 10-12 AWG	–	4.0 (35)		
JM60200-3CR					3	250 MCM-1 AWG	3/0-1 AWG	42 (375)		
JM60400-1CR	CVR-J-60400-M	CVRI-J-60400-M		225-400	2	2-6 AWG; (2) Cu 2-6 AWG	2-6 AWG	31 (275)		
JM60400-2CR					3	600kcmil	N/A	57 (500)		
JM60400-3CR					1	500kcmil-4 AWG		51 (450)		
JM60400-1MW22†					2	(2) Cu 3/0 - 4 AWG		57 (500)		
JM60400-2MW22†					3	(2) Al 3/0 - 4 AWG		34 (300)		
JM60400-3MW22†					1	(2) 350kcmil-1 AWG		42 (375)		
JM60600-1CR					CVR-J-60600	CVRI-J-60600	450-600	2		(2) 2 AWG - 6 AWG
JM60600-2CR	3	(2) 500kcmil-4 AWG		51 (450)						
JM60600-3CR										

*Covers sold separately. Blown fuse indication requires 90 volts minimum and closed circuit to operate.

**With *easyID™* blown fuse indication.

***Ratings for copper and aluminum wire except where otherwise noted.

†For Class J 400A double box lug configuration, optional cover provides IP20 finger-safe protection for dual 350kcmil-300kcmil wires or one single 350kcmil-6 AWG wire.