

Power Contactors for Switching Motors

Accessories for 3RT1 Contactors

Auxiliary switches

PU (UNIT, SET, M) = 1
 PS* = 1 unit
 PG = 41B



3RH1921-1LA..



3RH1921-1MA..



3RH1921-1C..



3RH1921-2C..

For contactors		Auxiliary contacts		DT	Screw terminals		DT	Spring-type terminals	
		Ident. No.	Version		Article No.	Price per PU		Article No.	Price per PU
Type			 NO	 NC				 NO	 NC

Auxiliary switch blocks for snapping onto the front according to EN 50005

Sizes S0 to S3¹⁾

2-pole auxiliary switch blocks with terminals on one side
 • Cable entry from above

3RT1.4	11	1	1	--	--		▶	3RH1921-1LA11	--
	20	2	--	--	--		▶	3RH1921-1LA20	--
	02	--	2	--	--		▶	3RH1921-1LA02	--
• Cable entry from below									
3RT1.4	11	1	1	--	--		▶	3RH1921-1MA11	--
	20	2	--	--	--		▶	3RH1921-1MA20	--
	02	--	2	--	--		▶	3RH1921-1MA02	--

Sizes S0 to S12²⁾

1-pole auxiliary switch blocks according to EN 50005 and EN 50012

3RT1.3 ... 3RT1.7	10	1	--	--	--		▶	3RH1921-1CA10	▶	3RH1921-2CA10
	01	--	1	--	--		▶	3RH1921-1CA01	▶	3RH1921-2CA01
	10	--	--	1	--		▶	3RH1921-1CD10	--	--
	01	--	--	--	1		▶	3RH1921-1CD01	--	--

¹⁾ Exception: 3RT16.

²⁾ Exception: 3RT12, 3RT16.

Load Feeders and Motor Starters for Use in the Control Cabinet

SIRIUS 3RA1 Load Feeders

Accessories

Accessories for 3RA1 direct-on-line and reversing starters

Selection and ordering data

	For motor starter protectors	For contactors	Version		DT	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
	Size	Size								
MSPs/circuit breakers ¹⁾										
	S00 ... S3	--	Auxiliary switches							
			Transverse	1 CO contacts ▶	3RV1901-1D		1	1 unit	41E	
			Transverse	1 NO + 1 NC ▶		3RV1901-1E		1	1 unit	41E
	S00 ... S3	--	Laterally mountable	1 NO + 1 NC ▶		3RV1901-1A		1	1 unit	41E
	S00 ... S3	--	Undervoltage releases		▶	3RV1902-1AP0		1	1 unit	41E
			50 Hz 230 V AC							
	S00 ... S3	--	Shunt releases		▶	3RV1902-1DP0		1	1 unit	41E
			50 Hz 230 V AC							
3RV1902-1...										
Contactors ²⁾										
			Snap-on auxiliary switch blocks							
			Connection from below							
	--	S00	1-pole	1 NO ▶	3RH1911-1BA10		1	1 unit	41B	
				1 NC ▶	3RH1911-1BA01		1	1 unit	41B	
	--	S00	2-pole	1 NO + 1 NC ▶	3RH1911-1MA11		1	1 unit	41B	
				2 NO ▶	3RH1911-1MA20		1	1 unit	41B	
	--	S0 ... S3		1 NO + 1 NC ▶	3RH1921-1MA11		1	1 unit	41B	
				2 NO ▶	3RH1921-1MA20		1	1 unit	41B	
				2 NC ▶	3RH1921-1MA02		1	1 unit	41B	
Connection from 2 sides										
	--	S00	4-pole	2 NO + 2 NC ▶	3RH1911-1FA22		1	1 unit	41B	
				1 NO ▶	3RH1921-1CA10		1	1 unit	41B	
		S0 ... S3	1-pole	1 NC ▶	3RH1921-1CA01		1	1 unit	41B	
	--	S0 ... S3	4-pole	2 NO + 2 NC ▶	3RH1921-1FA22		1	1 unit	41B	

¹⁾ Also see Chapter 7 "Protection Equipment" → "SIRIUS 3RV1 Motor Starter Protectors up to 100 A".

²⁾ Also see Chapter 3 "Switching Devices – Contactors and Contactor Assemblies".