


Power Contactors for Switching Motors

Accessories and Spare Parts for SIRIUS 3RT Contactors and SIRIUS 3RH2 Contactor Relays

Accessories

Link modules

PU (UNIT, SET, M) = 1
 PS* = 1 unit (unless otherwise specified)
 PG = 41B

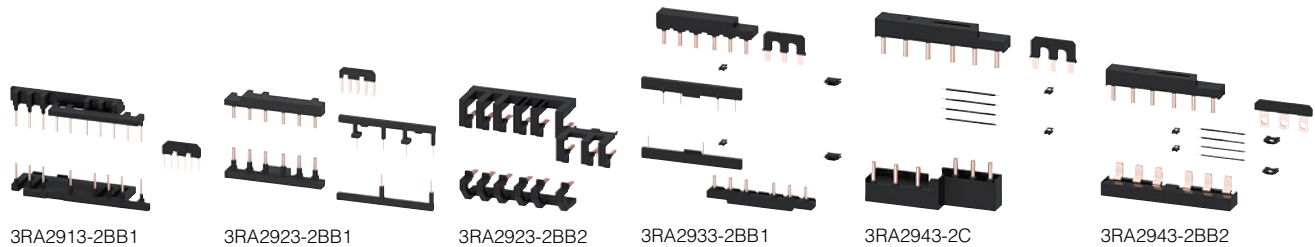

For con- tactors	Size	Version	SD	Screw terminals		SD	Spring-type terminals	
Type			d	Article No.	Price per PU	d	Article No.	Price per PU
Assembly kits ¹⁾ for contactor assemblies for star-delta (wye-delta) starting for making 3-pole contactor assemblies								
3RT01	S00-S00-S00	The assembly kit contains: Mechanical interlock, four connecting clips for three contactors, a star jumper, wiring modules on the top and bottom For main, auxiliary and control circuits	▶	3RA2913-2BB1	▶		3RA2913-2BB2	
3RT02	S0-S0-S0	The assembly kit contains: Mechanical interlock, four connecting clips for three contactors, a star jumper, wiring modules on the top and bottom - For main, auxiliary and control circuits - Only for main circuit	▶	3RA2923-2BB1 --	▶		-- 3RA2923-2BB2	
3RT02	S0-S0-S0	The assembly kit contains: Mechanical interlock, four connecting clips for three contactors, a star jumper, wiring modules on the top and bottom, 3-phase infeed terminal For main, auxiliary and control circuits	5	3RA2924-2BB1			--	
3RT03	S2-S2-S0	The assembly kit ²⁾ contains: Two connectors for three contactors, an S0 star jumper, a spacer, wiring modules on the top and bottom (S2-S0) for the main circuit, a cable set for the auxiliary circuit, a cable for connecting the A2 coil contact from the line contactor to the A2 coil contact of the delta contactor	▶	3RA2933-2C	▶		3RA2933-2C	
3RT03	S2-S2-S2	The assembly kit ²⁾ contains: Four connectors for three contactors, an S2 star jumper, a cable for connecting the A2 coil contact from the line contactor to the A2 coil contact of the delta contactor and - Wiring modules on the top and bottom for the main circuit and the auxiliary circuit - Wiring modules on the top and bottom for the main circuit, a cable set for the auxiliary circuit	▶	3RA2933-2BB1 --		5	-- 3RA2933-2BB2	
3RT04	S3-S3-S2	The assembly kit ²⁾ contains: Two connectors for three contactors, an S2 star jumper, a spacer, wiring modules on the top and bottom (S3-S2) for the main circuit, a cable set for the auxiliary circuit, a cable for connecting the A2 coil contact from the line contactor to the A2 coil contact of the delta contactor	2	3RA2943-2C		2	3RA2943-2C	
3RT04	S3-S3-S3	The assembly kit ²⁾ contains: Four connectors for three contactors, an S3 star jumper, a cable for connecting the A2 coil contact from the line contactor to the A2 coil contact of the delta contactor and - Wiring modules on the top and bottom for the main circuit and the auxiliary circuit - Wiring modules on the top and bottom for the main circuit, a cable set for the auxiliary circuit	2	3RA2943-2BB1 --		2	-- 3RA2943-2BB2	

¹⁾ When using the function modules for contactor assemblies for star-delta (wye-delta) starting, the wiring modules for the auxiliary current are not required.


²⁾ The 3RA2934-2B mechanical interlock for sizes S2 and S3 must be ordered separately, see page 3/114.

Contactor Assemblies for Star-Delta (Wye-Delta) Starting

SIRIUS 3RA24 contactor assemblies for star-delta (wye-delta) starting, up to 90 kW

Fully wired and tested contactor assemblies for star-delta (wye-delta) starting · Size S00-S00-S00 · Up to 11 kW

The figure shows the version with screw terminals

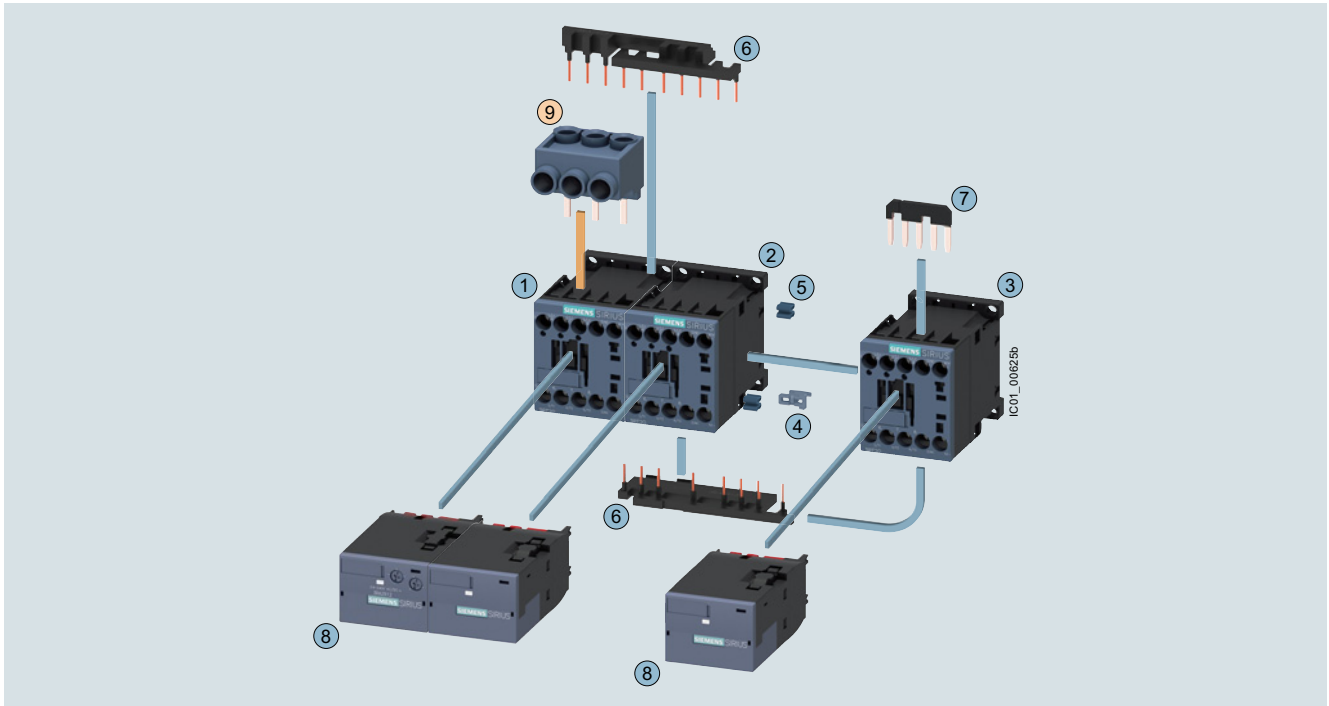

Mountable accessories (optional)

To be ordered separately	Type	Page
⑨ Three-phase infeed terminal ¹⁾	3RA2913-3K	3/116

Complete contactor assembly for star-delta (wye-delta) starting

Individual parts	Type	Q11 ²⁾	Q13	Q12	Page
①②③ Contactors, 5.5 kW	3RT2015	3RT2015	3RT2015	3RT2015	3/55, 3/62
①②③ Contactors, 7.5 kW	3RT2017	3RT2017	3RT2017	3RT2015	3/55, 3/62
①②③ Contactors, 11 kW	3RT2018	3RT2018	3RT2018	3RT2016	3/55, 3/62
④ ... ⑦ Assembly kit S00-S00-S00 comprising:	3RA2913-2BB1				3/111
④ Mechanical interlock					
⑤ Four connecting clips for three contactors					
⑥ Wiring modules on top and bottom for connecting the main and auxiliary circuits					
⑦ Star jumper					
⑧ Function modules for star-delta (wye-delta) starting	3RA2816-0EW20				3/106

¹⁾ Part ⑨ can only be mounted in the case of contactors with screw terminal.

²⁾ The version with 1 NO is required for momentary-contact operation.

Complete contactor assemblies for star-delta (wye-delta) starting, see page 3/180.