

Power Contactors for Switching Motors

Accessories and Spare Parts for SIRIUS 3RT Contactors and SIRIUS 3RH2 Contactor Relays

Accessories

Auxiliary switch blocks, instantaneous

PU (UNIT, SET, M) = 1
 PS* = 1 unit
 PG = 41B



3RH2911-1FC22



3RH2911-2FC22



3RH2911-1AA01



3RH2911-1BA01



3RH2911-1LA11



3RH2911-1MA11

For contactors/ contactor relays ¹⁾	Connections Position	Auxiliary contacts Version	SD	Screw terminals	SD	Spring-type terminals
Type		NO NC NO NC	d	Article No. Price per PU	d	Article No. Price per PU

Auxiliary switch blocks for snapping onto the front

Sizes S00 to S3

3RT2.1, 3RT2.2, 3RT2.3, 3RT2.4	--	4	--	--		▶ 3RH2911-1FA40	▶ 3RH2911-2FA40
3RH21, 3RH24	--	2	2	--		▶ 3RH2911-1FA22	▶ 3RH2911-2FA22
	--	--	4	--		▶ 3RH2911-1FA04	▶ 3RH2911-2FA04
	--	--	--	1		▶ 3RH2911-1FB11	▶ 3RH2911-2FB11
	--	1	1	1		▶ 3RH2911-1FB22	▶ 3RH2911-2FB22
	--	--	--	2		▶ 3RH2911-1FC22	▶ 3RH2911-2FC22

1- and 2-pole auxiliary switch blocks, cable entry from top or bottom

3RT2.1, 3RT2.2, 3RT2.3, 3RT2.4	Top	1	--	--		▶ 3RH2911-1AA10	--
	Bottom	1	--	--		▶ 3RH2911-1BA10	--
3RH21, 3RH24	Top	--	1	--		▶ 3RH2911-1AA01	--
	Bottom	--	1	--		▶ 3RH2911-1BA01	--
	Top	1	1	--		▶ 3RH2911-1LA11	--
	Bottom	1	1	--		▶ 3RH2911-1MA11	--
	Top	2	--	--		▶ 3RH2911-1LA20	--
	Bottom	2	--	--		▶ 3RH2911-1MA20	--

¹⁾ For detailed information on use, see pages 3/89 and 3/90.

Load Feeders and Motor Starters for Use in the Control Cabinet

SIRIUS 3RA2 Load Feeders

Accessories

Accessories for contactors

For contactors	Version	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Size		d					
Auxiliary switch blocks for snapping onto the front of contactors							
 3RH2911-1BA..	Cable entry from below						
	S00 ... S3	1-pole					
		- 1 NO	▶ 3RH2911-1BA10		1	1 unit	41B
		- 1 NC	▶ 3RH2911-1BA01		1	1 unit	41B
 3RH2911-1MA..	S00 ... S3	2-pole					
		- 1 NO + 1 NC	▶ 3RH2911-1MA11		1	1 unit	41B
		- 2 NO	▶ 3RH2911-1MA20		1	1 unit	41B
Auxiliary switch blocks for contactors, for lateral mounting							
 3RH2911-1DA..	S00	2 NC	2	3RH2911-1DA02	1	1 unit	41B
	S00	1 NO + 1 NC	2	3RH2911-1DA11	1	1 unit	41B
	S00	2 NO	2	3RH2911-1DA20	1	1 unit	41B
	S0/S3	2 NC	2	3RH2921-1DA02	1	1 unit	41B
	S0/S3	1 NO + 1 NC	2	3RH2921-1DA11	1	1 unit	41B
	S0/S3	2 NO	2	3RH2921-1DA20	1	1 unit	41B
 3RH2911-2DA..	S00	2 NC	2	3RH2911-2DA02	1	1 unit	41B
	S00	1 NO + 1 NC	2	3RH2911-2DA11	1	1 unit	41B
	S00	2 NO	2	3RH2911-2DA20	1	1 unit	41B
	S0/S3	2 NC	2	3RH2921-2DA02	1	1 unit	41B
	S0/S3	1 NO + 1 NC	2	3RH2921-2DA11	1	1 unit	41B
	S0/S3	2 NO	2	3RH2921-2DA20	1	1 unit	41B
Motor feeder connectors for contactors with screw terminals (can only be used for direct-on-line starters)							
 3RT1926-4RD01	Adapters for contactor						
	Ambient temperature $T_{u \max.} = 60^\circ\text{C}$						
	S00	Rated operational current I_e at AC-3/400 V: 20 A	5	3RT1916-4RD01	1	1 unit	41B
	S0	Rated operational current I_e at AC-3/400 V: 25 A	5	3RT1926-4RD01	1	1 unit	41B
 3RT1900-4RE01	Motor feeder connectors for contactors						
	S00, S0	--	5	3RT1900-4RE01	1	1 unit	41B

For the complete range of accessories for the 3RT contactors, see [page 3/76 onwards](#).