


Load Feeders and Motor Starters for Use in the Control Cabinet

SIRIUS 3RA2 Load Feeders

General data

Reversing duty • For standard rail mounting • Size S2

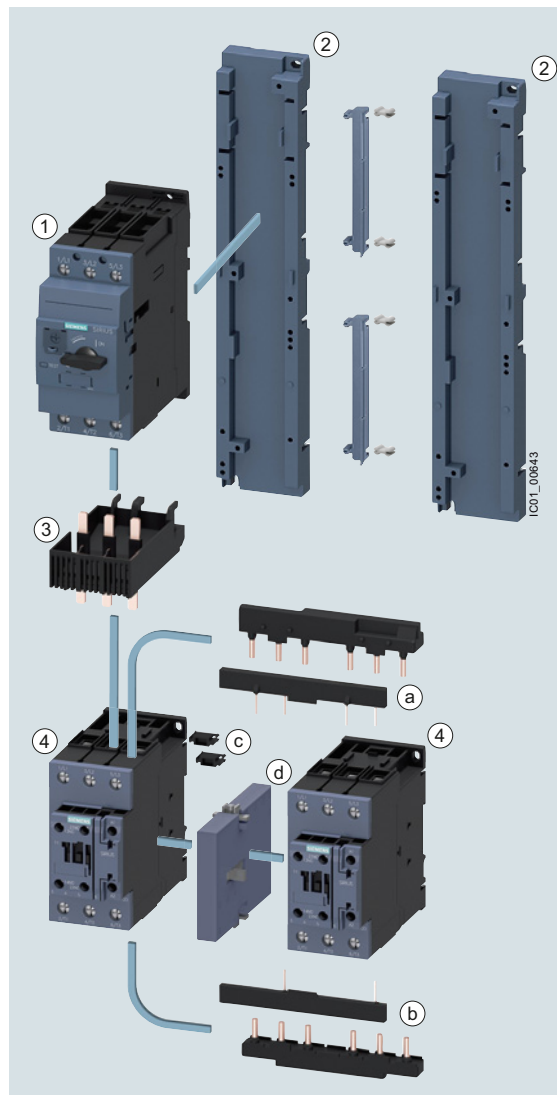

RH assembly kit for reversing duty and standard rail mounting in size S2

3RA2933-1BB1

Comprising:

- Wiring kit for the main and auxiliary circuits
- Two standard mounting rail adapters
- Two side modules
- Four connecting wedges
- Mechanical interlock
- Two connectors for two contactors
- Fixing accessories

- ① **Motor starter protector**
Size S2
Screw terminals
 - ② **Standard mounting rail adapter**
3RA2932-1AA00
with two side modules
3RA2902-1B
and four connecting wedges
8US1998-1AA00
 - ③ **Link module**
3RA2931-1AA00
Screw terminals
 - ④ **Contactors**
size S2
Screw terminals
- Wiring kit**
Screw terminals
3RA2933-2AA1
- Ⓐ Upper wiring module
 - Ⓑ Lower wiring module
 - Ⓒ Two connectors for two contactors
 - Ⓓ Mechanical interlock
3RA2934-2B (not part of the wiring kit, must be ordered separately)


3RA22 load feeder for reversing duty and standard rail mounting in size S2
(the version with screw terminals is shown in the picture)

RH assembly kits for reversing duty and standard rail mounting
in size S2, [see page 8/51](#).

Load Feeders and Motor Starters for Use in the Control Cabinet

SIRIUS 3RA2 Load Feeders

Accessories

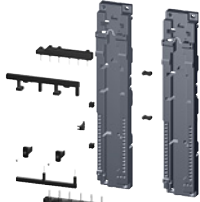	For motor starter protectors	For contactors	Version	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
RH assembly kits for reversing duty and standard rail mounting									
 3RA2923-1BB1	RH assembly kits for screw terminals				Screw terminals				
	S0	S0	Comprising: • Wiring kit for main and auxiliary circuit • Two standard mounting rail adapters • Two connecting wedges • Mechanical interlocks • Two connecting clips for two contactors • Fixing accessories Link modules must be ordered separately.	2	3RA2923-1BB1		1	1 unit	41B
	S2	S2	Comprising: • Wiring kit for main and auxiliary circuit • Two standard mounting rail adapters • Two side modules • Four connecting wedges • Mechanical interlocks • Two connectors for two contactors • Fixing accessories Link modules must be ordered separately.	2	3RA2933-1BB1		1	1 unit	41B
	S3	S3	Comprising: • Wiring kit for main and auxiliary circuit • Two standard mounting rail adapters • Three side modules • Six connecting wedges • Mechanical interlocks • Two connectors for two contactors • Fixing accessories Link modules must be ordered separately.	2	3RA2943-1BB1		1	1 unit	41B
RH assembly kits for spring-type terminals					Spring-type terminals				
	S0	S0	Comprising: • Wiring kit for main and auxiliary circuit • Two standard mounting rail adapters • Two connecting wedges • Mechanical interlocks • Two connecting clips for two contactors • Two spacers • Fixing accessories Link modules must be ordered separately.	2	3RA2923-1BB2		1	1 unit	41B
Push-in lugs for screw fixing									
 3RV2928-0B	S00, S0	--	For screwing the motor starter protector (of the load feeder) onto mounting plates; 2 units are required for each motor starter protector	2	3RV2928-0B		100	10 units	41E

For graphic overviews for RH assembly kits, [see page 8/12 onwards](#).