

YASKAWA 1000-Series Option

Analog Monitor Installation Manual

Type AO-A3


To properly use the product, read this manual thoroughly and retain for easy reference, inspection, and maintenance. Ensure the end user receives this manual.

安川 1000シリーズ オプション

アナログモニタ 取扱説明書

形式 AO-A3

製品を安全にご使用いただくために、この取扱説明書を必ずお読みください。
また、本書をお手元に保管していただくとともに、最終的に本製品をご使用になる
ユーザー様のお手元に確実に届けられるよう、お取り計らい願います。

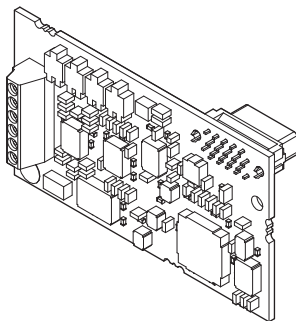

Copyright © 2008 YASKAWA ELECTRIC CORPORATION

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of Yaskawa. No patent liability is assumed with respect to the use of the information contained herein. Moreover, because Yaskawa is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Yaskawa assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.

Table of Contents

1	PREFACE AND SAFETY	4
2	PRODUCT OVERVIEW	7
3	RECEIVING.....	8
4	OPTION COMPONENTS	9
5	INSTALLATION PROCEDURE	10
6	RELATED PARAMETERS	22
7	TROUBLESHOOTING	23
8	SPECIFICATIONS	25

1 Preface and Safety

Yaskawa manufactures products used as components in a wide variety of industrial systems and equipment. The selection and application of Yaskawa products remain the responsibility of the equipment manufacturer or end user. Yaskawa accepts no responsibility for the way its products are incorporated into the final system design. Under no circumstances should any Yaskawa product be incorporated into any product or design as the exclusive or sole safety control. Without exception, all controls should be designed to detect faults dynamically and fail safely under all circumstances. All systems or equipment designed to incorporate a product manufactured by Yaskawa must be supplied to the end user with appropriate warnings and instructions as to the safe use and operation of that part. Any warnings provided by Yaskawa must be promptly provided to the end user. Yaskawa offers an express warranty only as to the quality of its products in conforming to standards and specifications published in the Yaskawa manual. **NO OTHER WARRANTY, EXPRESS OR IMPLIED, IS OFFERED.** Yaskawa assumes no liability for any personal injury, property damage, losses, or claims arising from misapplication of its products.


◆ Applicable Documentation

The following manuals are available for the option:

Analog Monitor AO-A3 Option

	Yaskawa 1000-Series Option Analog Monitor AO-A3 Installation Manual (This book) Manual No: TOBP C730600 40	Read this manual first. The installation manual is packaged with the option and contains information required to install the option and set up related unit parameters.
--	---	--

Unit

	Yaskawa AC Drive 1000-Series Quick Start Guide	The unit manuals cover basic installation, wiring, operation procedures, functions, troubleshooting, and maintenance information. The manuals also include important information about parameter settings and unit tuning. Access these sites to obtain Yaskawa instruction manuals: U.S.: http://www.yaskawa.com Europe: http://www.yaskawa.eu.com Japan: http://www.e-mechatronics.com Other areas: contact a Yaskawa representative.
	Yaskawa AC Drive 1000-Series Technical Manual	
	Yaskawa D1000 Series Power Regenerative Converter Instruction Manual	
	Yaskawa R1000 Series Power Regenerative Unit Instruction Manual	

◆ Terms

Note: Indicates supplemental information that is not related to safety messages

Option: Yaskawa 1000-Series Option Analog Monitor AO-A3

- Yaskawa AC Drive 1000-Series

Unit: Yaskawa D1000 Series Power Regenerative Converter

- Yaskawa R1000 Series Power Regenerative Unit

Energy-Saving Unit: Yaskawa D1000 Series Power Regenerative Converter

- Yaskawa R1000 Series Power Regenerative Unit

◆ Registered Trademarks

Trademarks are the property of their respective owners.

◆ Supplemental Safety Information

Read and understand this manual before installing, operating, or servicing this option. Install the option according to this manual and local codes.

The following conventions indicate safety messages in this manual. Failure to heed these messages could cause fatal injury or damage products and related equipment and systems.

DANGER

Indicates a hazardous situation, which, if not avoided, will result in death or serious injury.

WARNING

Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.

1 Preface and Safety

NOTICE

Indicates an equipment damage message.

■ General Safety

General Precautions

- The diagrams in this book may include options and units without covers or safety shields to illustrate details. Be sure to reinstall covers or shields before operating any devices. Use the option according to the instructions described in this manual.
- Any illustrations, photographs, or examples used in this manual are provided as examples only and may not apply to all products to which this manual is applicable.
- The products and specifications described in this manual or the content and presentation of the manual may be changed without notice to improve the product and/or the manual.
- When ordering new copies of the manual, contact a Yaskawa representative or the nearest Yaskawa sales office and provide the manual number shown on the front cover.



DANGER

Heed the safety messages in this manual.

Failure to comply will result in death or serious injury.

The operating company is responsible for any injuries or equipment damage resulting from failure to heed the warnings in this manual.

NOTICE

Do not modify the unit or option circuitry.

Failure to comply could result in damage to the unit or option and will void warranty. Yaskawa is not responsible for any modification of the product made by the user. This product must not be modified.

Do not expose the unit or option to halogen group disinfectants.

Failure to comply may cause damage to the electrical components in the unit or option. Do not pack the unit in wooden materials that have been fumigated or sterilized. Do not sterilize the entire package after the product is packed.

2 Product Overview

◆ About This Product

The Analog Monitor Option AO-A3 allows the user to expand the number of available analog outputs to monitor unit performance.

The option uses unit parameter settings and the output signal gain and bias to assign functions to output terminals V1 and V2.

The option has two analog outputs, an 11-bit signed (1/2048) output resolution, and a -10 to 10 Vdc non-isolated output voltage.

◆ Applicable Models

The option can be used with the unit models in [Table 1](#).

Table 1 Applicable Models




Unit Series	Unit Model Number
A1000	All models
L1000A	All models
D1000	All models
R1000	All models

3 Receiving

Please perform the following tasks upon receiving the option:

- Inspect the option for damage. Contact the shipper immediately if the option appears damaged upon receipt.
- Verify receipt of the correct model by checking the model number printed on the option nameplate. (Refer to [Figure 1](#) on page 9 for more information)
- Contact your supplier if you have received the wrong model or the option does not function properly.

◆ Option Package Contents

Description:	Option	Ground Wires	Screws (M3)	Installation Manual
-				
Quantity:	1	3	3	1

◆ Tools Required for Installation


- A Phillips screwdriver (M3 metric/#1, #2 U.S. standard size [<1>](#)) is required to install the option.
- A straight-edge screwdriver (blade depth: 0.4 mm, width: 2.5 mm) is required to wire the option terminal block.
- A pair of diagonal cutting pliers. (required for some unit models)
- A small file or medium grit sandpaper. (required for some unit models)

Note: Tools required to prepare option cables for wiring are not listed in this manual.

[<1>](#) Select a screwdriver appropriate for the unit capacity.

4 Option Components

◆ Analog Monitor AO-A3 Option

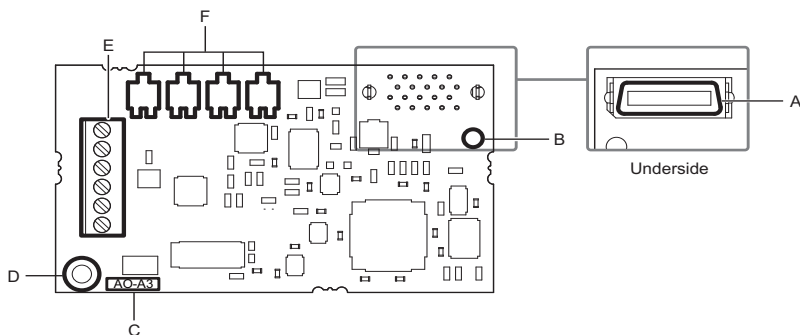

A – Connector (CN5)

B – Installation hole

C – Model number

D – Ground terminal and installation hole <1>

E – Terminal Block TB1


F – Potentiometers <2>

<1> The ground wires provided in the option shipping package must be connected during installation.

<2> NOTICE: Do not adjust the potentiometers on the option. The potentiometers are factory set and may change the voltage output characteristics and cause output signal inaccuracy if misadjusted.

Figure 1 Analog Monitor AO-A3 Option Components

◆ Terminal Block TB1

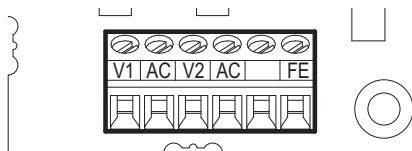

Refer to [Table 4](#) on page [19](#) for details on TB1 terminal functions and signal levels.

5 Installation Procedure

◆ Section Safety

DANGER

Electric Shock Hazard

Do not connect or disconnect wiring while the power is on.

Failure to comply will result in death or serious injury.

Disconnect all power to the unit and wait at least the amount of time specified on the unit front cover safety label. After all indicators are off, measure the DC bus voltage to confirm safe level, and check for unsafe voltages before servicing. The internal capacitor remains charged after the power supply is turned off.

WARNING

Electrical Shock Hazard

Do not remove the front covers of the unit while the power is on.

Failure to comply could result in death or serious injury.

The diagrams in this section may include options and units without covers or safety shields to show details. Be sure to reinstall covers or shields before operating any devices. Use the option according to the instructions described in this manual.

Do not allow unqualified personnel to use equipment.

Failure to comply could result in death or serious injury.

Maintenance, inspection, and replacement of parts must be performed only by authorized personnel familiar with installation, adjustment, and maintenance of this product.

Do not touch circuit boards while the power to the unit is on.

Failure to comply could result in death or serious injury.



WARNING

Do not use damaged wires, stress the wiring, or damage the wire insulation.

Failure to comply could result in death or serious injury.

Fire Hazard

Tighten all terminal screws to the specified tightening torque.

Loose electrical connections could result in death or serious injury by fire due to overheating of electrical connections.

NOTICE

Damage to Equipment

Observe proper electrostatic discharge (ESD) procedures when handling the option, unit, and circuit boards.

Failure to comply may result in ESD damage to circuitry.

Never shut the power off while the unit is running or outputting voltage.

Failure to comply may cause the application to operate incorrectly or damage the unit.

Do not operate damaged equipment.

Failure to comply may cause further damage to the equipment.

Do not connect or operate any equipment with visible damage or missing parts.

Tighten all terminal screws to the specified tightening torque.

Failure to comply could result in damage to the terminal block.

Do not use unshielded cable for control wiring.

Failure to comply may cause electrical interference resulting in poor system performance.

Use shielded twisted-pair wires and ground the shield to the ground terminal of the unit.

5 Installation Procedure

NOTICE

Properly connect all pins and connectors.

Failure to comply may prevent proper operation and possibly damage equipment.

Check wiring to ensure that all connections are correct after installing the option and connecting any other devices.

Failure to comply may result in damage to the option.

◆ Prior to Installing the Option

Prior to installing the option, wire the unit, make the necessary connections to the unit terminals, and verify that the unit functions normally. Refer to the instruction manual packaged with the unit for information on wiring and connecting the unit.

Figure 2 shows an exploded view of the unit with the option and related components for reference.

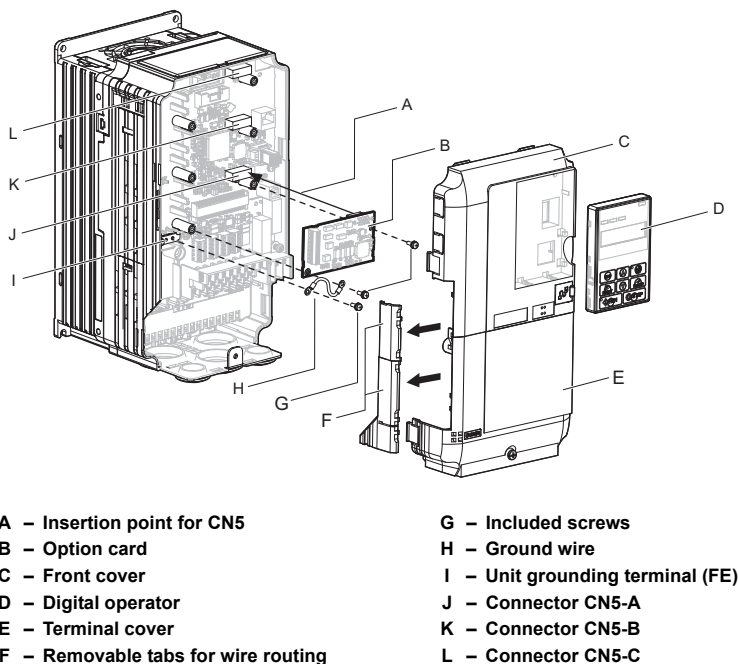


Figure 2 Unit Components with Option

5 Installation Procedure

◆ Installing the Option

Refer to the instructions below to install the option.

1. Shut off power to the unit, wait the appropriate amount of time for voltage to dissipate, then remove the digital operator (D), front cover (C), and terminal cover (E). Cover removal varies depending on unit size. Refer to the instruction manual packaged with the unit for directions on removing the covers.

DANGER! *Electrical Shock Hazard. Disconnect all power to the unit and wait at least the amount of time specified on the unit front cover safety label. After all indicators are off, measure the DC bus voltage to confirm safe level, and check for unsafe voltages before servicing to prevent electric shock. The internal capacitor remains charged even after the power supply is turned off.*

NOTICE: *Damage to Equipment. Observe proper electrostatic discharge procedures (ESD) when handling the option, unit, and circuit boards. Failure to comply may result in ESD damage to circuitry.*

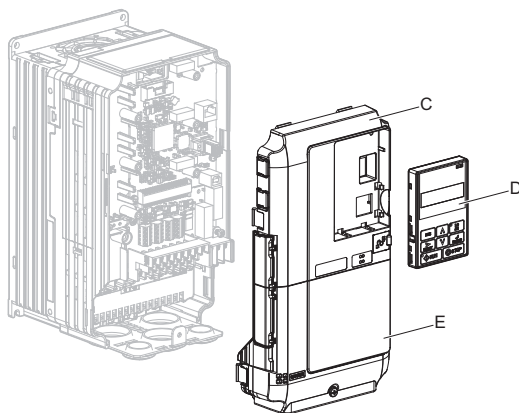


Figure 3 Remove the Front Cover, Terminal Cover, and Digital Operator

2. Insert the option card (B) into the CN5-A (J), CN5-B (K), or CN5-C (L) connector located on the unit and fasten it into place using one of the included screws (G).

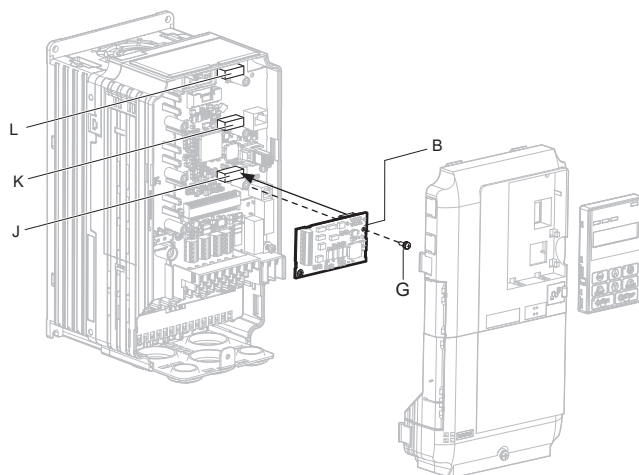


Figure 4 Insert the Option Card

5 Installation Procedure

3. Connect one end of the ground wire (H) to the ground terminal (I) using one of the remaining screws (G). Connect the other end of the ground wire (H) to the remaining ground terminal and installation hole on the option (B) using the last remaining provided screw (G).

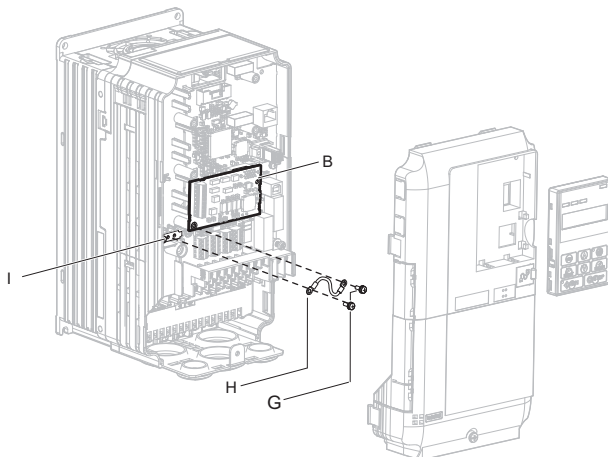


Figure 5 Connect the Ground Wire

- Note:**
1. The option package includes three ground wires. Use the longest wire when plugging the option into connector CN5-C on the unit side. Use the next longest wire when plugging the option into connector CN5-B. Use the shortest wire when plugging the option into connector CN5-A. Refer to [Option Package Contents on page 8](#) for more information.
 2. There are two screw holes on the unit for use as ground terminals (J). When connecting three options, two ground wires will need to share the same unit ground terminal.

4. Prepare and connect the wire ends as shown in **Figure 6** and **Figure 7**. Refer to **Wire Gauges and Tightening Torques on page 18** to confirm that the proper tightening torque is applied to each terminal. Take particular precaution to ensure that each wire is properly connected and wire insulation is not accidentally pinched into electrical terminals.

WARNING! Fire Hazard. Tighten all terminal screws according to the specified tightening torque. Loose electrical connections could result in death or serious injury by fire due to overheating electrical connections. Tightening screws beyond the specified tightening torque may cause erroneous operation, damage the terminal block, or cause a fire.

NOTICE: Heat shrink tubing or electrical tape may be required to ensure that cable shielding does not contact other wiring. Insufficient insulation may cause a short circuit and damage the option or unit.

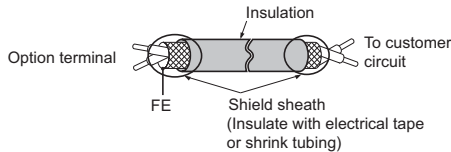


Figure 6 Preparing Ends of Shielded Cable

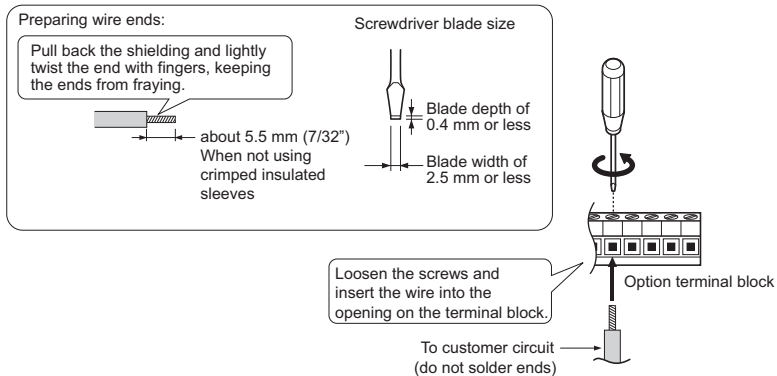


Figure 7 Preparing and Connecting Cable Wiring

5 Installation Procedure

- Wire the customer-supplied circuit to the terminal block on the option. Refer to **Figure 8** for wiring instructions.

Connection Diagram

Refer to **Table 4** on page 19 for a detailed description of the option board terminal functions. To ensure accurate control, use stable power supply for the voltage reference source.

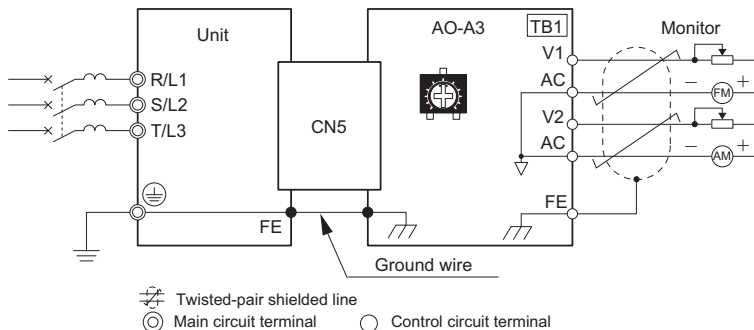


Figure 8 Option Connection Diagram

NOTICE: Do not adjust the potentiometers on the option. The potentiometers are factory set and may change the voltage output characteristics and cause output signal inaccuracy if misadjusted.

Wire Gauges and Tightening Torques

Wire gauge and torque specifications are listed in **Table 4**.

Table 2 Wire Gauges and Tightening Torques


Terminal signal	Screw Size	Tightening Torque N·m (in·lb)	Bare Cable		Ferrule-Type Terminals		Wire Type
			Recomm. Gauge mm ²	Applicable Gauges mm ²	Recomm. Gauge mm ²	Applicable Gauges mm ²	
V1, V2, AC, FE	M2	0.22 to 0.25 (1.95 to 2.21)	0.75 (18 AWG)	Stranded wire: 0.25 to 1.0 (24 to 17 AWG) Solid wire: 0.25 to 1.5 (24 to 16 AWG)	0.5 (20 AWG)	0.25 to 0.5 (24 to 20 AWG)	Shielded twisted pair, etc.

Ferrule-Type Terminals

Yaskawa recommends using CRIMPFOX 6 by Phoenix Contact or equivalent ferrule-type terminals with the specifications listed in [Table 5](#) for wiring to ensure proper connections.

Note: Properly trim wire ends so loose wire ends do not extend from the crimp terminals.

Table 3 Ferrule-Type Terminal Sizes

Ferrule-Type Terminal	Wire Gauge mm ²	Phoenix Contact Model	L mm (in)	d1 mm (in)	d2 mm (in)
	0.25 (24 AWG)	AI 0.25 - 6YE	10.5 (13/32)	0.8 (1/32)	2 (5/64)
	0.34 (22 AWG)	AI 0.34 - 6TQ	10.5 (13/32)	0.8 (1/32)	2 (5/64)
	0.5 (20 AWG)	AI 0.5 - 6WH	14 (9/16)	1.1 (3/64)	2.5 (3/32)

Terminal Functions

Table 4 Option Terminal Functions

Terminal	Function	Signal Level	Description
V1	Analog voltage output 1	-10 to 10 V	- Analog voltage output for an external monitoring device </> - Output resolution 11-bit plus sign (1/2048) - Max. load current 3 mA
V2	Analog voltage output 2		
AC	Common	0 V	Common for analog voltage output
FE	Ground	—	Used for grounding shielded lines

<1> Set the functions and output levels for terminals V1 and V2 using unit parameters. See the unit Instruction Manual for directions on setting parameters.

5 Installation Procedure

6. Route the option wiring.

Depending on the unit model, some units may require routing the wiring through the side of the front cover to the outside. In these cases, cut out the perforated openings on the left side of the unit front cover as shown in **Figure 9-A** and leave no sharp edges to damage wiring.

Route the wiring inside the enclosure as shown in **Figure 9-B** for units that do not require routing through the front cover.

Refer to the Peripheral Devices & Options section of the unit Instruction Manual for more information.

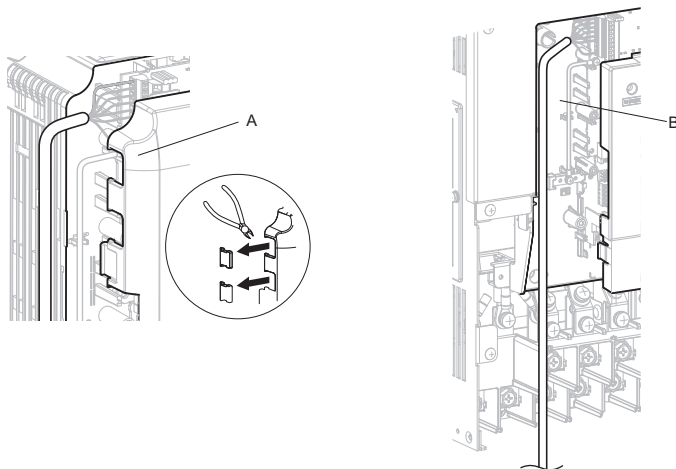


Figure 9 Wire Routing Examples

7. Replace and secure the front covers of the unit (C, E) and replace the digital operator (D).

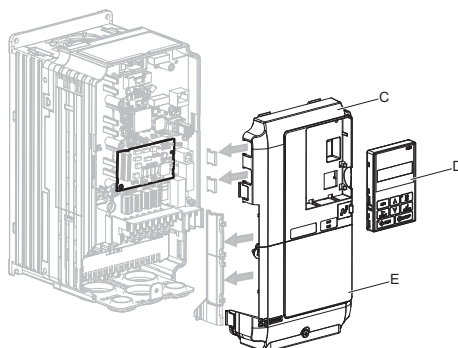


Figure 10 Replace the Front Covers and Digital Operator

Note: Take proper precautions when wiring the option so that the front covers will easily fit back onto the unit. Make sure cables are not pinched between the front covers and the unit when replacing the covers.

8. Set unit parameters in [Table 5](#) for proper option performance.

6 Related Parameters

The parameters outlined in the following sections are used to set up the unit for operation with the option. Set parameters as needed. Parameter setting methods can be found in the drive unit Instruction Manual.

◆ Parameter Table

Table 5 Related Parameters

No. (Addr. Hex)	Name	Description	Values
F4-01 (391)	Terminal V1 Monitor Selection	Sets the monitor signal for output from terminal V1. Set this parameter to the last three digits of the desired U□-□□ monitor. Some U parameters are available only in certain control modes. For example, enter “103” for U1-03.	Default when installed to drive: 102 (output frequency) Default when installed to energy-saving unit: 000 (reserved) Range: 000 to 999
F4-02 (392)	Terminal V1 Monitor Gain	Sets the gain for voltage output via terminal V1, where 100% equals 10 V output. Terminal output voltage is limited to 10 V.	Default: 100.0% Min: -999.9 Max: 999.9
F4-03 (393)	Terminal V2 Monitor Selection	Sets the monitor signal for output from terminal V2. Set this parameter to the last three digits of the desired U□-□□ monitor. Some U parameters are available only in certain control modes. For example, enter “103” for U1-03.	Default when installed to drive: 103 (output voltage) Default when installed to energy-saving unit: 000 (reserved) Range: 000 to 999
F4-04 (394)	Terminal V2 Monitor Gain	Sets the gain for voltage output via terminal V2, where 100% equals 10 V output. Terminal output voltage is limited to 10 V. <I>	Default: 50.0% Min: -999.9 Max: 999.9
F4-05 (395)	Terminal V1 Monitor Bias	Sets the amount of bias added to the voltage output via terminal V1. <I>	Default: 0.0% Min: -999.9 Max: 999.9
F4-06 (396)	Terminal V2 Monitor Bias	Sets the amount of bias added to the voltage output via terminal V2. <I>	Default: 0.0% Min: -999.9 Max: 999.9
F4-07 (397)	Terminal V1 Signal Level	Sets the voltage level for the analog output. 0: 0 to +10 Vdc	Default: 0 Range: 0, 1
F4-08 (398)	Terminal V2 Signal Level	1: -10 to +10 Vdc	Default: 0 Range: 0, 1

<I> The unit outputs voltage while this parameter is being adjusted. Voltage levels can be adjusted to match the specifications of an external meter.

7 Troubleshooting

◆ Unit-Side Error Codes

Table 6 lists the various fault codes related to the option. Refer to the unit instruction manual for further details on fault codes.

Check the following items first when an error code occurs on the unit:

- Are the cables connected properly and securely?
- Is the option properly installed to the unit?
- Did a momentary power loss occur?

Table 6 Fault Displays, Causes, and Possible Solutions

Digital Operator Display		Fault Name
oFA01	oFA01	Option Fault (CN5-A)
		Option is not properly connected.
Cause		Possible Solution
Option at unit port CN5-A was changed during run.		Turn the power off and check the connectors between the unit and option.
Digital Operator Display		Fault Name
oFb01	oFb01	Option Fault (CN5-B)
		Option is not properly connected.
Cause		Possible Solution
Option at unit port CN5-B was changed during run.		Turn the power off and check the connectors between the unit and option.
Digital Operator Display		Fault Name
oFb02	oFb02	Option Fault (CN5-B)
		Two of the same options are connected simultaneously.
Cause		Possible Solution
Same type of option connected to ports CN5-A and CN5-B.		Use only compatible options.
Digital Operator Display		Fault Name
oFC01	oFC01	Option connection error at unit port CN5-C
Cause		Possible Solution
Option at unit port CN5-C was changed during run.		Turn the power off and check the connectors between the unit and option.

7 Troubleshooting

Digital Operator Display		Fault Name
	oFC02	Option Fault (CN5-C)
		Two of the same options are connected simultaneously.
Cause		Possible Solution
Same type of option connected to unit ports CN5-A, CN5-B, and CN5-C.		Use only compatible options.

◆ Preventing Electrical Signal Interference

Take the following steps to prevent erroneous operation caused by electrical signal interference:

- Use shielded wire for the signal lines.
- Limit the length of wiring under 50 m (164 ft.).
- Separate the control wiring to the option, main circuit wiring, and power lines.

■ Interface Circuit

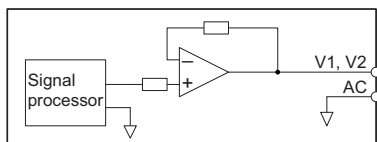


Figure 11 Output Interface Circuit

8 Specifications

Table 7 Option Specifications

Item	Description
Model	AO-A3
Analog Output Terminals	2 terminals
Voltage Output	Output signal voltage: -10 to 10 Vdc Output resolution: 11-bit plus sign (1/2048) Max. load current: 3 mA
Ambient Temperature	-10°C to +50°C (14°F to 122°F)
Humidity	95% RH or lower with no condensation
Storage Temperature	-20°C to +60°C (-4°F to +140°F) allowed for short-term transport of the product
Area of use	Indoor (free of corrosive gas, airborne particles, etc.)
Altitude	1000 m (3280 ft.) or lower

8 Specifications

◆ Revision History

Revision dates and manual numbers are located on the bottom of the back cover.

MANUAL NO.

TOBP C730600 40B <1>

Revision number

Published in Japan May 2010

Date of publication

Date of Publication	Revision Number	Section	Revised Content
August 2016	<8>	Front cover	Revision: Format
		Back cover	Revision: Address and format
October 2013	<7>	All	Addition: Information on R1000
		Back cover	Revision: Address
August 2012	<6>	All	Addition: Information on D1000
		Back cover	Revision: Address
May 2011	<5>	—	Japanese version only.
February 2011	<4>	Front cover, back cover	Revision: Format
		Chapters 3, 4, 5, and 7	Edited for clarity.
July 2010	<3>	Back cover	Revision: Address
July 2010	<2>	Entire document	Edited for procedural clarity and readability.
		Back cover	Revision: Address
May 2010	<1>	Back cover	Revision: Address
July 2008	—	—	First edition

YASKAWA 1000-Series Option Analog Monitor Installation Manual

DRIVE CENTER (INVERTER PLANT)

2-13-1, Nishimiyachi, Yukuhashi, Fukuoka 824-8511, Japan
Phone: +81-930-25-2548 Fax: +81-930-25-3431
<http://www.yaskawa.co.jp>

YASKAWA ELECTRIC CORPORATION

New Pier Takeshiba South Tower, 1-16-1, Kaigan, Minatoku, Tokyo, 105-6891, Japan
Phone: +81-3-5402-4502 Fax: +81-3-5402-4580
<http://www.yaskawa.co.jp>

YASKAWA AMERICA, INC.

2121, Norman Drive South, Waukegan, IL 60085, U.S.A.
Phone: +1-800-YASKAWA (927-5292) or +1-847-887-7000 Fax: +1-847-887-7310
<http://www.yaskawa.com>

YASKAWA ELÉTRICO DO BRASIL LTDA.

777, Avenida Piraporinha, Diadema, São Paulo, 09950-000, Brasil
Phone: +55-11-3585-1100 Fax: +55-11-3585-1187
<http://www.yaskawa.com.br>

YASKAWA EUROPE GmbH

Hauptstraße 185, 65760 Eschborn, Germany
Phone: +49-6196-569-300 Fax: +49-6196-569-398
<http://www.yaskawa.eu.com> E-mail: info@yaskawa.eu.com

YASKAWA ELECTRIC KOREA CORPORATION

9F, Kyobo Securities Bldg., 97, Usadang-daero, Yeongdeungpo-gu, Seoul, Korea 07327
Phone: +82-2-784-7844 Fax: +82-2-784-8495
<http://www.yaskawa.co.kr>

YASKAWA ELECTRIC (SINGAPORE) PTE. LTD.

151, Lorong Chuan, #04-02A, New Tech Park, 556741, Singapore
Phone: +65-6282-3003 Fax: +65-6289-3003
<http://www.yaskawa.com.sg>

YASKAWA ELECTRIC (THAILAND) CO., LTD.

59, 1st-5th Floor, Flourish Building, Soi Ratchadapisek 18, Ratchadapisek Road, Huaykwang, Bangkok, 10310, Thailand
Phone: +66-2-017-0099 Fax: +66-2-017-0799
<http://www.yaskawa.co.th>

YASKAWA ELECTRIC (CHINA) CO., LTD.

22F, One Corporate Avenue, No.222, Hubin Road, Shanghai, 200021, China
Phone: +86-21-5385-2200 Fax: +86-21-5385-3299
<http://www.yaskawa.com.cn>

YASKAWA ELECTRIC (CHINA) CO., LTD. BEIJING OFFICE

Room 1011, Tower W3 Oriental Plaza, No. 1, East Chang An Ave.,
Dong Cheng District, Beijing, 100738, China
Phone: +86-10-8518-4086 Fax: +86-10-8518-4082

YASKAWA ELECTRIC TAIWAN CORPORATION

9F, 16, Nanking E. Rd., Sec. 3, Taipei, 104, Taiwan
Phone: +886-2-2502-5003 Fax: +886-2-2505-1280
<http://www.yaskawa.com.tw>

YASKAWA INDIA PRIVATE LIMITED

#17/A, Electronics City, Hosur Road, Bangalore, 560 100 (Karnataka), India
Phone: +91-80-4244-1900 Fax: +91-80-4244-1901
<http://www.yaskawaindia.in>

YASKAWA

YASKAWA ELECTRIC CORPORATION

In the event that the end user of this product is to be the military and said product is to be employed in any weapons systems or the manufacture thereof, the export will fall under the relevant regulations as stipulated in the Foreign Exchange and Foreign Trade Regulations. Therefore, be sure to follow all procedures and submit all relevant documentation according to any and all rules, regulations and laws that may apply.

Specifications are subject to change without notice for ongoing product modifications and improvements.

© 2008-2016 YASKAWA ELECTRIC CORPORATION

MANUAL NO.

TOBP C730600 40E <8>-0

Published in Japan August 2016
16-4-16