

## Low Profile IN BOX® for New Vinyl Siding Construction

One-piece, 22.0 cu. inch recessed electrical box with weatherproof-in-use extra-duty cover for new siding applications. Non-metallic cover and base. Accepts most single gang wiring devices and uses standard indoor wall plates or a GFCI cover plate. Box and white cover are textured/ paintable. UV rated plastic for long outdoor life.

### FEATURES AND BENEFITS

- IN BOX's one-piece assembly replaces the installation of an electrical box, siding block, and bubble cover assembly
- Installs in the wall, so less of it shows outside
- Outer flange covers cut ends of siding
- Install option: Cover is removable for easier device installation
- No gaskets required


| CATALOG NUMBER | UPC/DCI/NAED MFG #018997 | ORIENTATION/ COVER COLOR | SIDING TYPE | UNIT PKG | STD PKG | DIM A | DIM B | DIM C | DIM D | DIM E |
|----------------|--------------------------|--------------------------|-------------|----------|---------|-------|-------|-------|-------|-------|
| DBVS1C         | 14317                    | Vertical/Clear           | All Types   | 1        | 4       | 9.058 | 7.012 | 5.160 | 2.148 | 2.879 |
| DBVS1W         | 14318                    | Vertical/White           | All Types   | 1        | 4       | 9.058 | 7.012 | 5.160 | 2.148 | 2.879 |
| DBHS1C         | 77600                    | Horizontal/Clear         | All Types   | 1        | 4       | 7.012 | 9.058 | 5.160 | 2.148 | 2.879 |
| DBHS1W         | 77602                    | Horizontal/White         | All Types   | 1        | 4       | 7.012 | 9.058 | 5.160 | 2.148 | 2.879 |



Note: Meets 2015 CEC (Rule 26-702), NEMA 3R, 2017 NEC 406.9 (b); Where a weatherproof-in-use cover is required for 15 or 20 AMP receptacles installed outdoors. Add suffix "GC" to Catalog # when ordering in Canada, for example DBVS1CGC. Replacement covers available on page K-17. 2-Gang, style available on page K-8.

**PATENTED. ADDITIONAL PATENTS PENDING.**


**WEATHERPROOF-IN-USE**  
**EXTRA-DUTY**

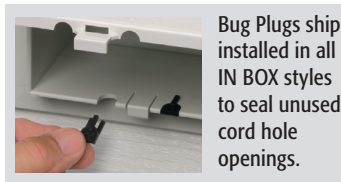


Bug Plugs ship installed in all IN BOX styles to seal unused cord hole openings.



DBVS1C

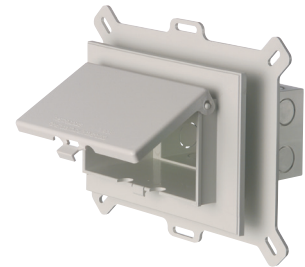


DBHS1W

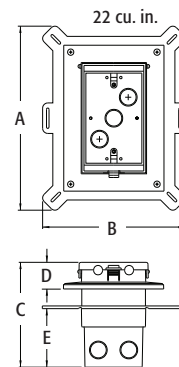


### INSTALLATION INSTRUCTIONS



1 Cut a 3-1/4" x 5-1/2" hole in substrate. Pull wiring.

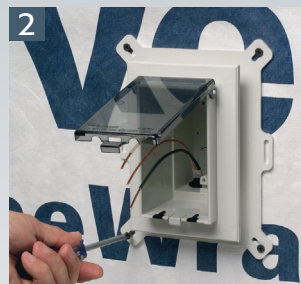

2 Install NM cable connector and wire, attach IN BOX to substrate.

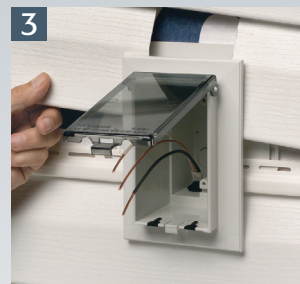

3 Install siding, inserting the cut ends of the siding under the outer flange of the IN BOX.



4 Install wiring device per manufacturer's instructions, Local and National Electrical Codes.



Accepts most single gang wiring devices and uses a standard indoor wall plate.



Completed installation with weatherproof-in-use cover. DBVS1C shown.

### In Box for new siding includes...

Box with weatherproof-in-use extra-duty cover; installed bug plugs; (1) standard duplex and (1) standard GFCI face plate; installation screws; and (1) NM cable connector.

Scan For Video

