



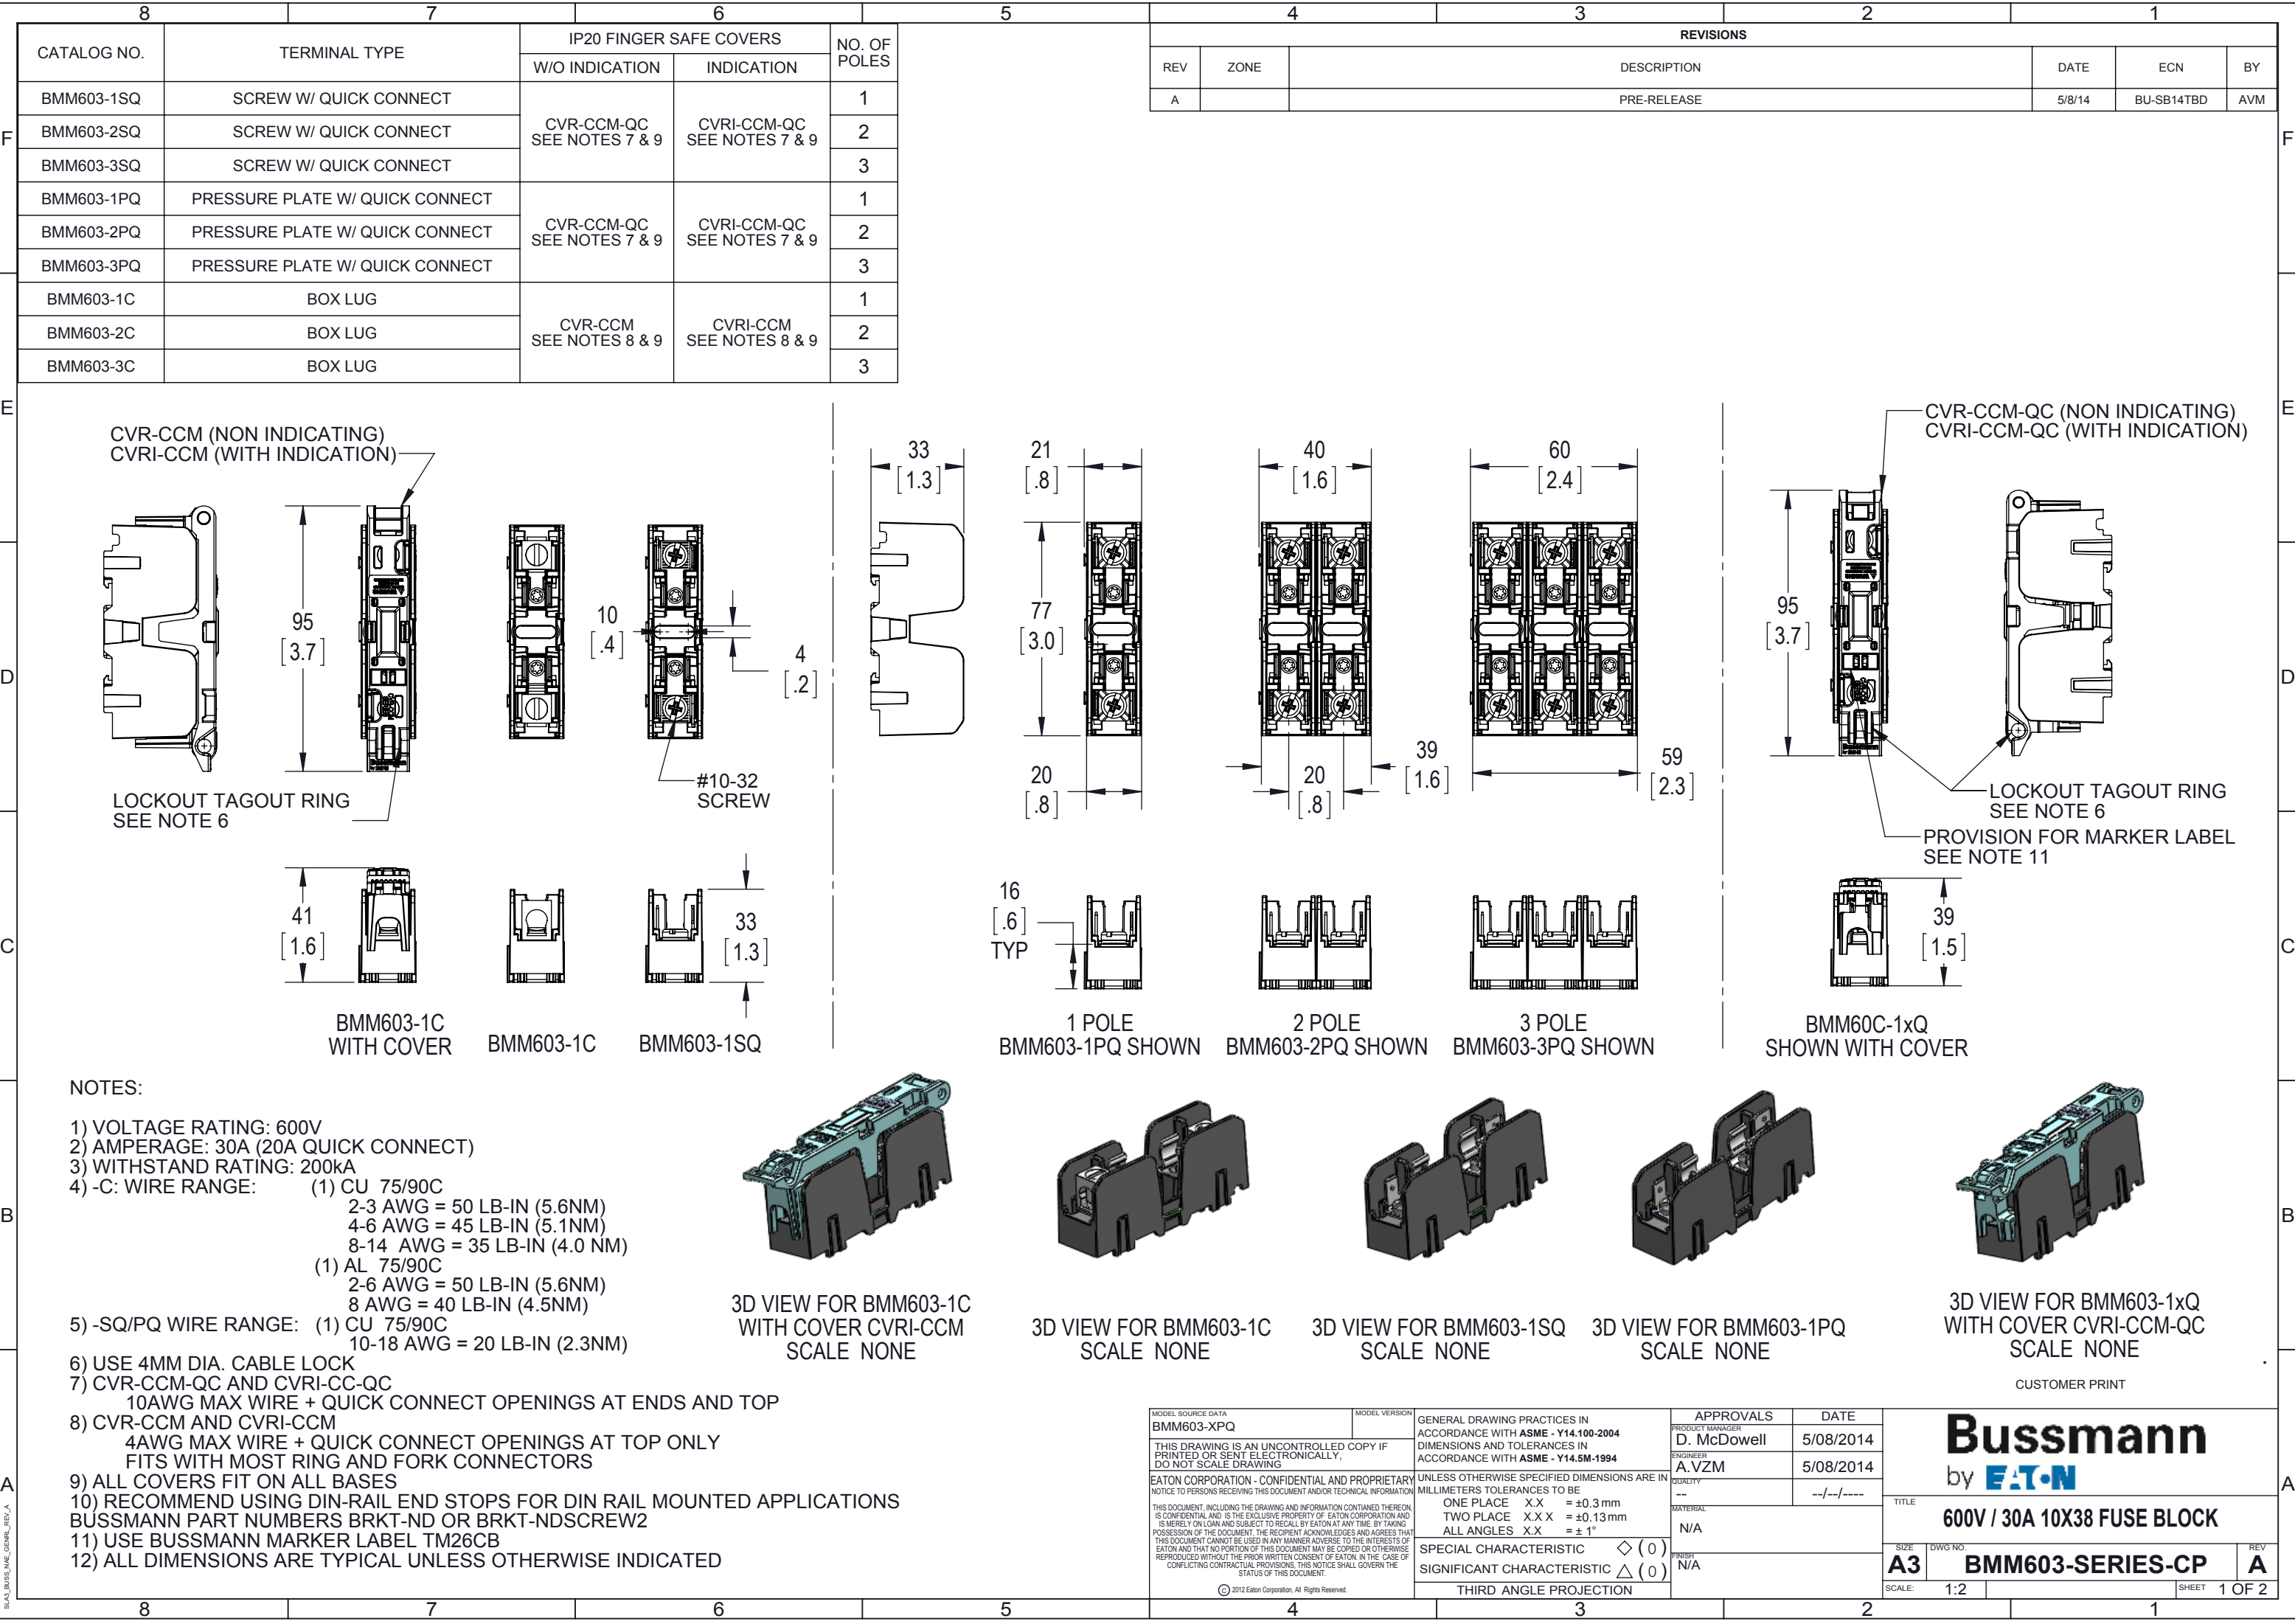


THIS SECTION MAY BE CUT
OUT FOR USE WITH VERTICALLY
ORIENTED QUICK CONNECTS

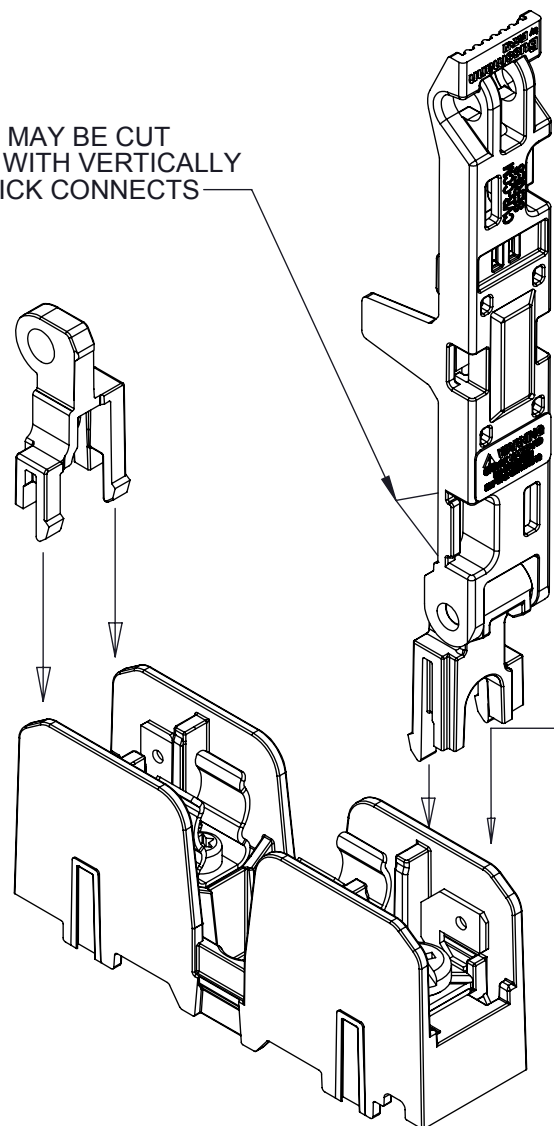


PUSH COVER PIVOT
AND END PIECE
SNAPS INTO SLOTS
IN BASE. THE COVER
MAY BE ORIENTED IN
EITHER DIRECTION.

COVER INSTALLATION
ONCE INSTALLED THE COVER CANNOT BE
REMOVED

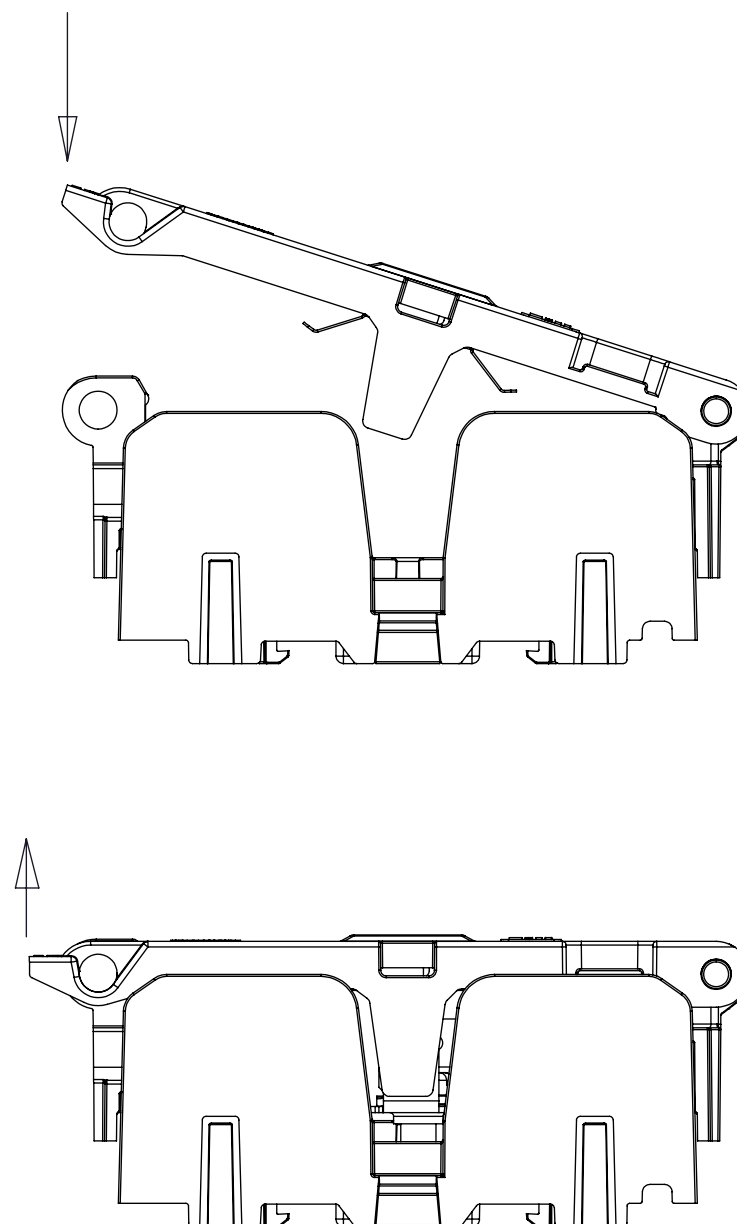


OPENING AND CLOSING
PUSH/PULL ON END TAB, ROTATE UNTIL
CLOSED/OPEN

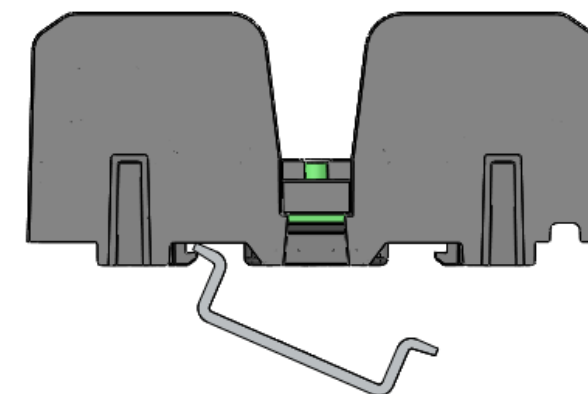

1. HOOK DIN RAIL SNAPS ON ONE SIDE OF THE DIN RAIL

2. PUSH DOWN TO DEFLECT THE SNAPS

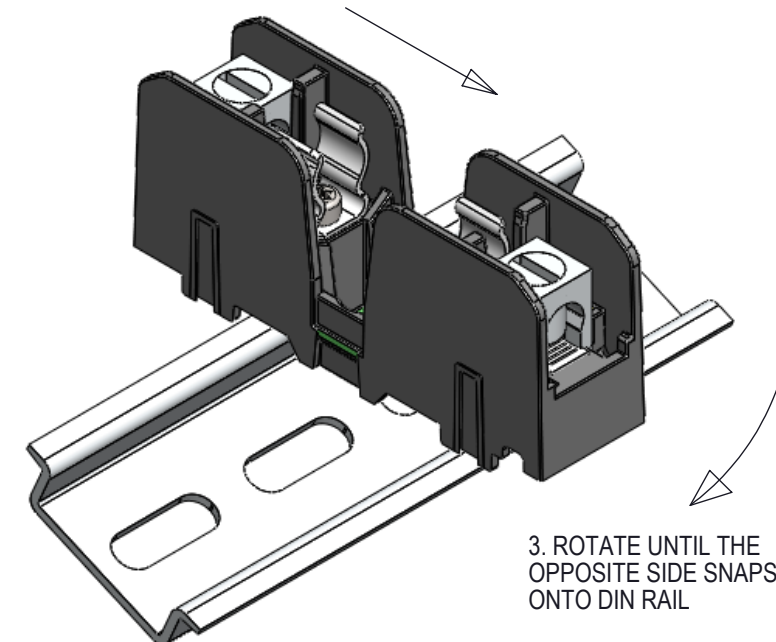

3. ROTATE UNTIL THE
OPPOSITE SIDE SNAPS
ONTO DIN RAIL

INSTALLATION ON DIN RAIL
END STOPS MAY BE NECESSARY FOR SOME
ASSEMBLY CONDITIONS - SEE NOTE 10

CUSTOMER PRINT

Bussmann
by **E.T.N.**

TITLE
600V / 30A 10X38 FUSE BLOCK

SIZE DWG NO. REV
A3 BMM603-SERIES-CP A

SCALE: 1:2 SHEET 2 OF 2