


Staple



A Pentair Company

Hoffman Enclosures Inc.
2100 Hoffman Way
Anoka, MN 55303-1745
(763) 422-2211 Tel
www.hoffmanonline.com

1. Remove two grey plastic plugs.
2. Install all parts as shown.

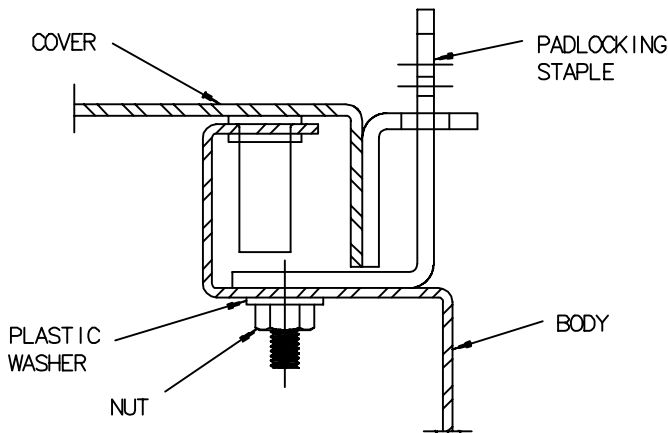

Installation Instructions For Large Grounding Kit 99411400



A Pentair Company


Hoffman Enclosures Inc.

2100 Hoffman Way

Anoka, MN 55303-1745

(763) 422-2211 Tel


www.hoffmanonline.com

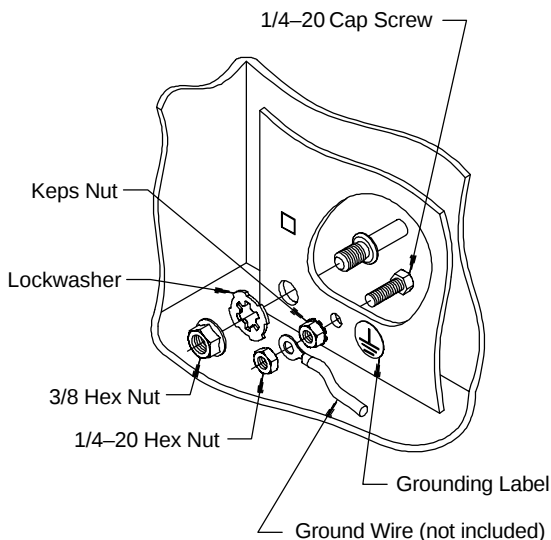

1. Insert the 1/4-20x7/8 bolt through the hole in the panel as shown.
2. Secure bolt with keps nut. The keps nuts must penetrate into the paint to insure electrical continuity.
3. Attach the ground wire and secure with 1/4-20 hex nut as shown.
4. Install the lockwasher under one of the nuts securing the panel to insure grounding between the panel and the enclosure.
5. Attach grounding label included adjacent to the bolt as shown.

Installation Instructions For Large Grounding Kit 99411400

1. Secure keps nut on each ground stud. The keps nuts must penetrate into the paint to insure electrical continuity.
2. Attach the ground wire and secure with the 1/4–20 hex nuts as shown.
3. Attach the grounding labels included adjacent to the studs as shown.

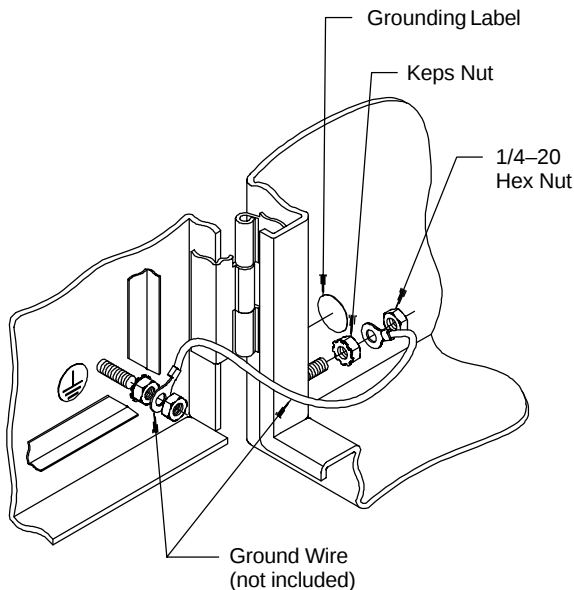

INSTRUCTIONS FOR CONDUIT ENTRY INTO **HOFFMAN RAINPROOF ENCLOSURES**

A. Conduit Entry Above Live Parts:

1. Use only U.L. listed rain tight or liquid tight conduit hubs.
2. Install hubs and conduit according to the hub manufacturers instructions.

B. Conduit Entry Below Live Parts:

1. Punch or drill the correct hole for the size of conduit to be used (see table below) or use the appropriate knockout (where provided).
2. Secure the conduit with locknuts inside and out, or with a locking bushing on the inside and a locknut on the outside.

CONDUIT SIZE

1/2"
3/4"
1"
1 1/4"
1 1/2"
2"
2 1/2"
3"

HOLE SIZE

7/8"
1 1/8"
1 3/8"
1 3/4"
2"
2 1/2"
3"
3 5/8"