



INSTRUCTIONS CM396I

© Panduit Corp. 2015

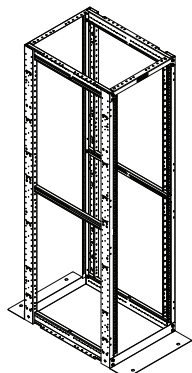

R4PCN****

- (2) Side Channel Assemblies
- (2) Base Angles
- (2) Top Brackets
- (1) Hardware Kit
 - (25) 12-24 Cage Nuts
 - (25) 12-24 x.5" Screws
 - (16) Paint Piercing Washers
 - (16) 3/8 x 1" Bolts
 - (1) Tube of Anti-Oxidizing Gel

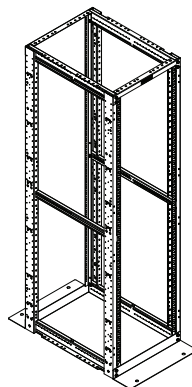

R4P****


- (2) Side Channel Assemblies
- (2) Base Angles
- (2) Top Bracket
- (1) Hardware Kit
 - (25) 12-24 x.5" Screws
 - (16) Paint Piercing Washers
 - (16) 3/8 x 1" Bolts
 - (1) Tube of Anti-Oxidizing Gel

Step 1

Lay one Side Assembly on the floor or on a pair of sturdy saw horses. Apply antioxidant paste to painted surfaces that the 3/8" paint piercing washers will come in contact with. Install Base Angles and Top Brackets using (8) 3/8" Bolts and Paint Piercing Washers.

DO NOT TIGHTEN.


Note: The base angles are assembled on the bottom of the rack and the top angles are assembled at the top of the rack. A diamond on the outer face of each post indicates the bottom of the rack. See closeup in Step 2.

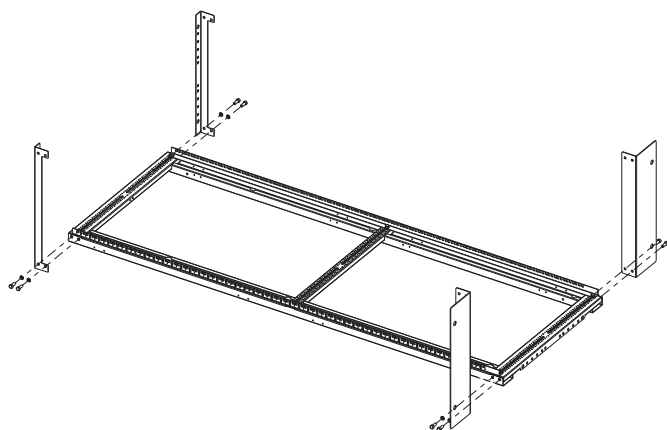


Step 2

Place remaining Side Assembly as shown. Apply antioxidant paste to painted surfaces that the 3/8" paint piercing washers will come in contact with. Assemble to Base Angles using 3/8" Bolts and Paint Piercing Washers. One of each per side.

DO NOT TIGHTEN.

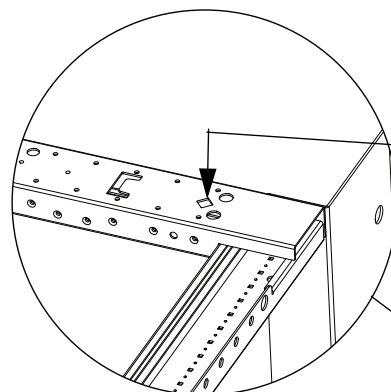


Diamond indicates bottom of rack

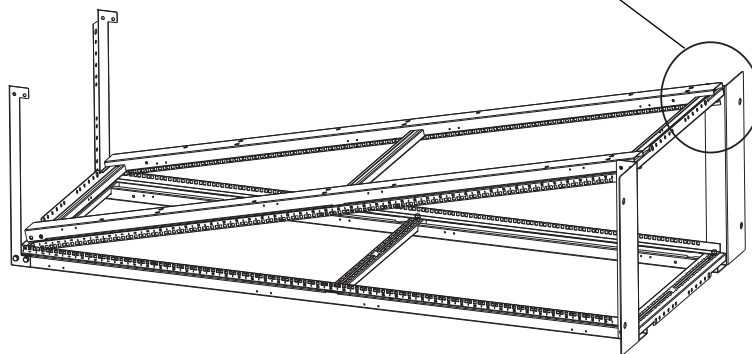


Step 3

Hinging Side Assembly on the two fasteners affixed in Step 2, rotate Side Assembly upwards to align mounting holes in the two top brackets. Install remaining (6) 3/8" Bolts and paint piercing washers in the locations shown below. Stand the rack upright. Verify #12-24 tapped holes or Cage nuts are EIA spaced at 18.31". Square the rack by measuring the distance from A to D, and B to C shown in 3.2. The difference in distance from A to D, and B to C should be no greater than 1/8". **Completely tighten all bolts to at least 14 ft.-lbs(19.0 N-m)**


3.1

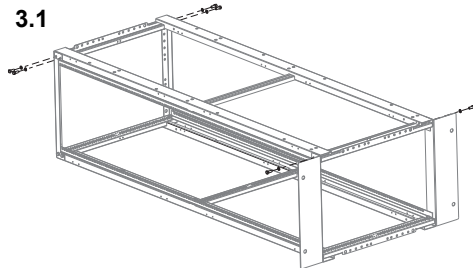

3.2

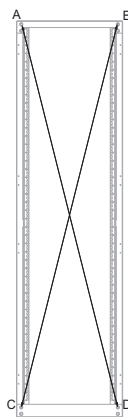

Grounding

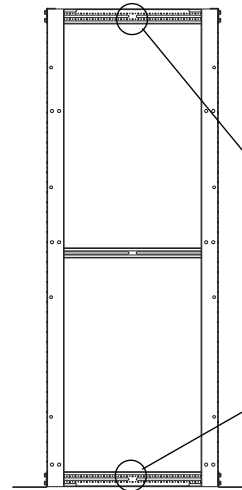


Grounding Locations

Two hole ground lug attachment located on the top and bottom rails of the side channel assembly at the locations shown. Remove masking before installing.

Location Guide

Mount rack to floor using the location guide below for mounting hole and overall size information.

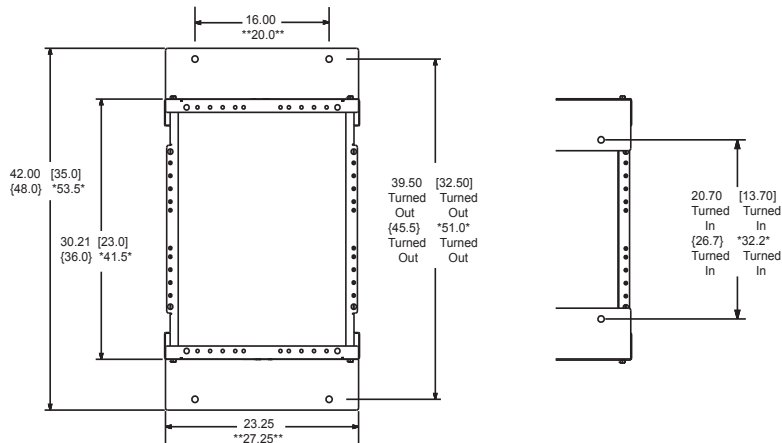

All dimensions are in inches.


x.xx are dimensions for 30" deep 4 post racks
 [x.xx] are dimensions for 23" deep 4 post racks
 {x.xx} are dimensions for 36" deep 4 post racks
 x.xx are dimensions for 42" deep 4 post racks
 x.xx are dimensions for 23" wide 4 post racks

Note: Floor Mounting Bolts must be used in all applications in order to provide maximum rigidity, load bearing capacity and safety. The maximum weight load is 2500 pounds. The rack is designed for heavier equipment to be mounted near the bottom and supported from front to back. Shelves (sold separately) that mount on both the front and rear of the rack may also be installed to support equipment. Manufacturers often provide a shelf (or cradle) to support their specific equipment. In cases where the manufacturer doesn't provide a cradle, please contact Panduit engineering prior to installation for possible alternative mounting methods.


Adjustable EIA Mounting Rails

All 4 rails are fully adjustable. To set depth loosen (3)5/16"-18 X 3/4" Mounting bolts and slide to desired position. **Retighten to 20 foot pounds to engage washers.**

Panduit recommends putting the front rails 1" back for optimal thermal and cable management. Front rails are to be recessed less than 1.5" to be compatible with newer thermal ducts.

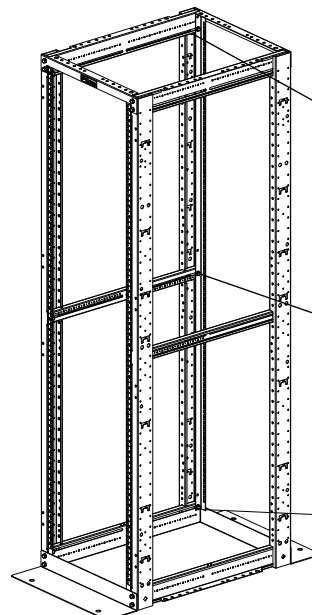


Bolt Orientation


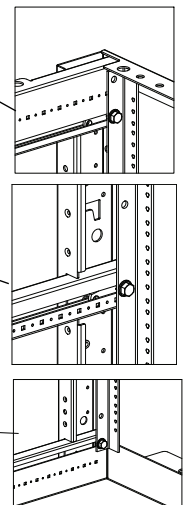


Flippable EIA Mounting Rails

The rack is shipped with rails in a numbers-up orientation. The rails can be flipped to read in a numbers-down orientation by moving 1 right rail and 1 left rail in tandem. Remove (3) 5/16"-18 X 3/4" Mounting Bolts on each rail. Then flip **right** rail so that numbering reads down and bolt to **left** side of assembly using bolt orientation shown. Then flip **left** rail so that numbering reads down and bolt to **right** side of assembly using bolt orientation shown.

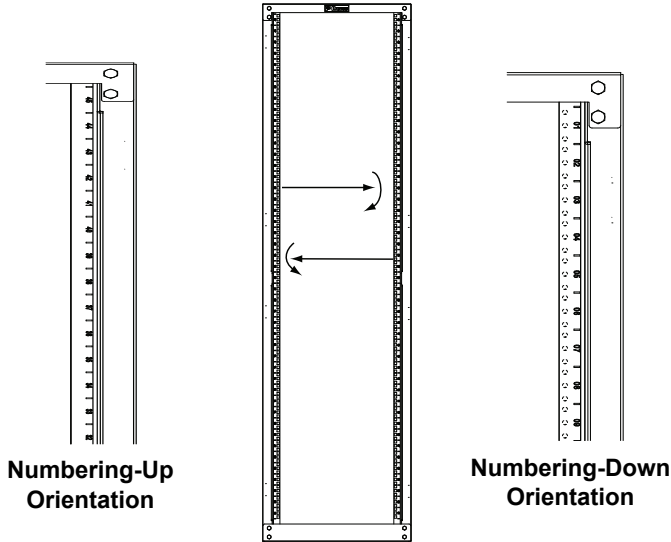

Use J-Bolt mounting holes for securing ladder rack to the 4-post rack

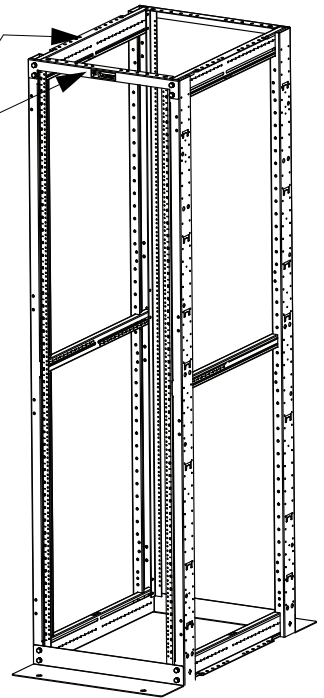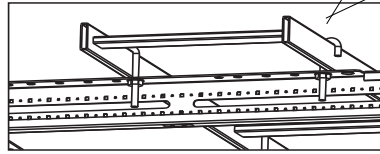

CMR4PWF (for use with Patchrunner cable managers only)

Apply Antioxidant Paste to painted surfaces that the 3/8" paint piercing washers will come in contact with.


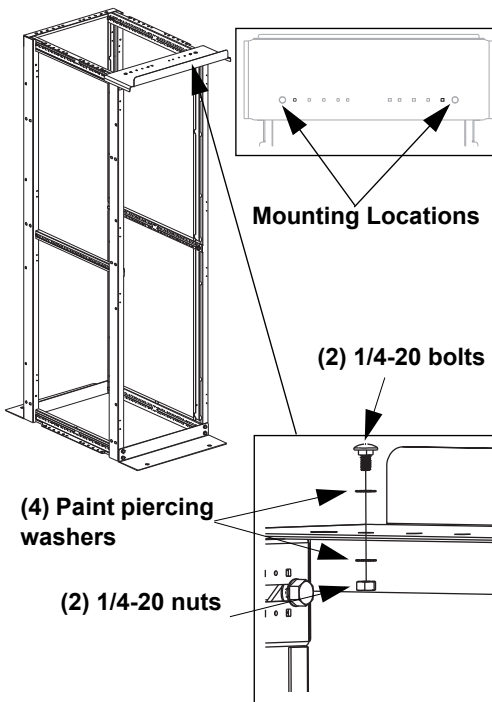


Fig. 1

Secure the waterfall as shown in Fig. 1 using provided hardware.


CVPPB- Zero RU Bracket- to mount 1RU EIA 19" copper and fiber patch panels to the side of rack posts.

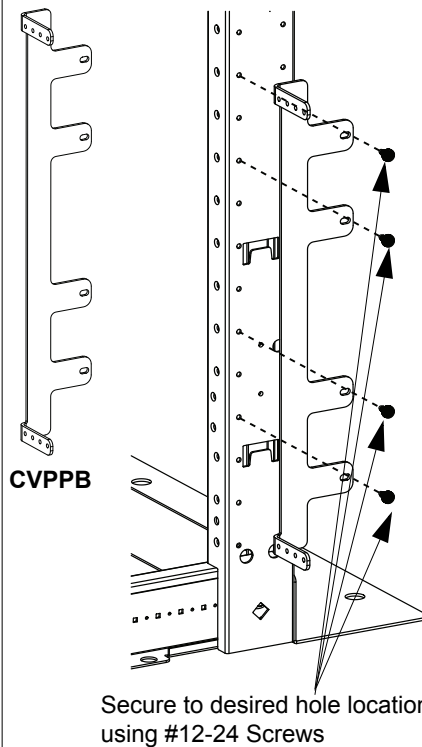


Side of post installation

RSHLF- Shelf for 30" Deep rack
RSHLF23- Shelf for 23" Deep rack
RSHLF36- Shelf for 36" Deep rack

Note: Shelf load rating is 275 lbs. when rails are spaced a minimum of half the shelf depth.

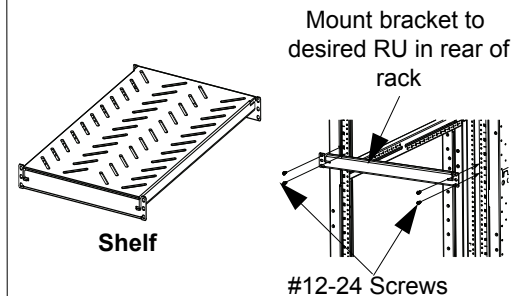

Slide shelf into slots in rear mounting bracket

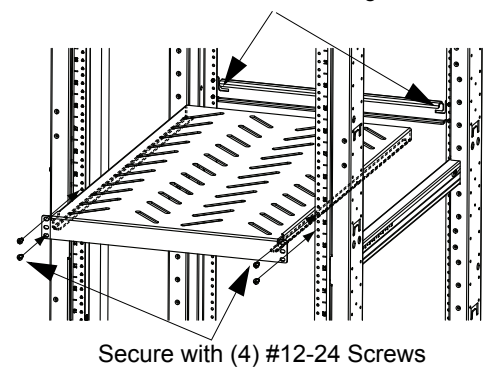


Note: Shelf is designed to support large networking equipment in combination with supplied equipment mounting flanges


Long POU's

Part Numbers: CMRPSVD20TL, CMRPSVD20, RPSV243520TL5, RPSV243620TL6

Affix Power Strip Mounting mounting brackets using #12-24 screws provided into tapped holes in the front or the sides of the post. Power Strip Mounting Brackets can also be mounted to the rear equipment rails. To center the 66.25" vertical power strips mount L-Bracket at RU spaces 03 and 43 for 7ft. 4 post racks. For 8ft. 4 post racks, mount L-Bracket at RU spaces 06 and 46 or spaces 07 and 47. For 6.5ft. 4 post rack, flip bottom bracket 180° and mount L-bracket at RU spaces 02 and 40. Mount power strip between brackets.

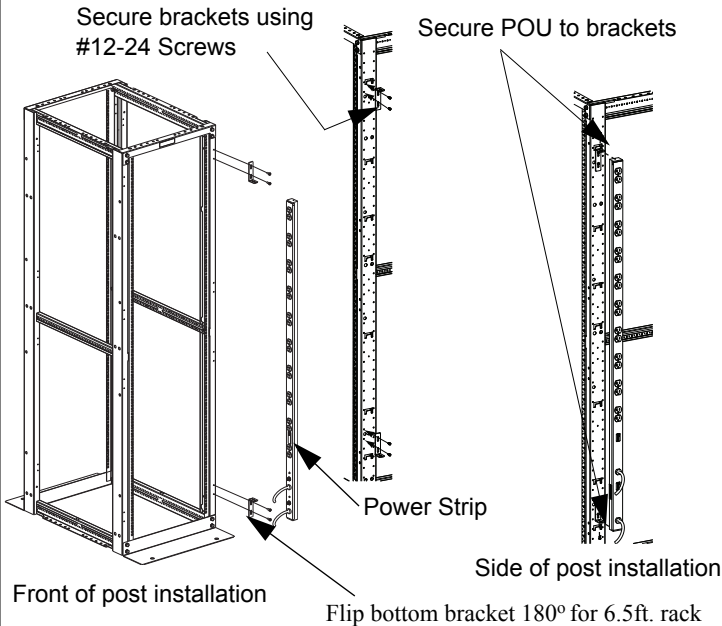


CVPDUB- Pair of Brackets for Vertical POU Button Mounting to the side of the rack post.

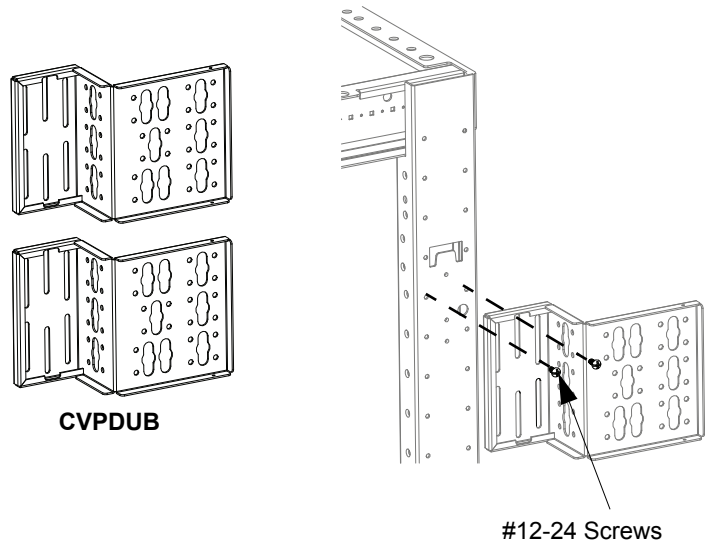


Align bracket to desired location on rack post, then secure with #12-24 screws.

Short POU's

Part Numbers: CMRPSV20, CMRPSV20TL

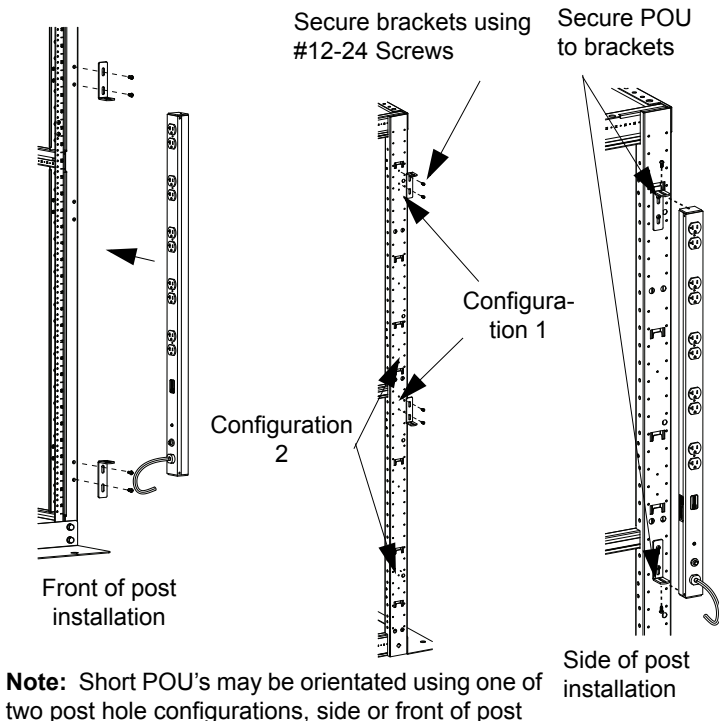

CNSPE- Pair of end slack spools including spools and mounting brackets.

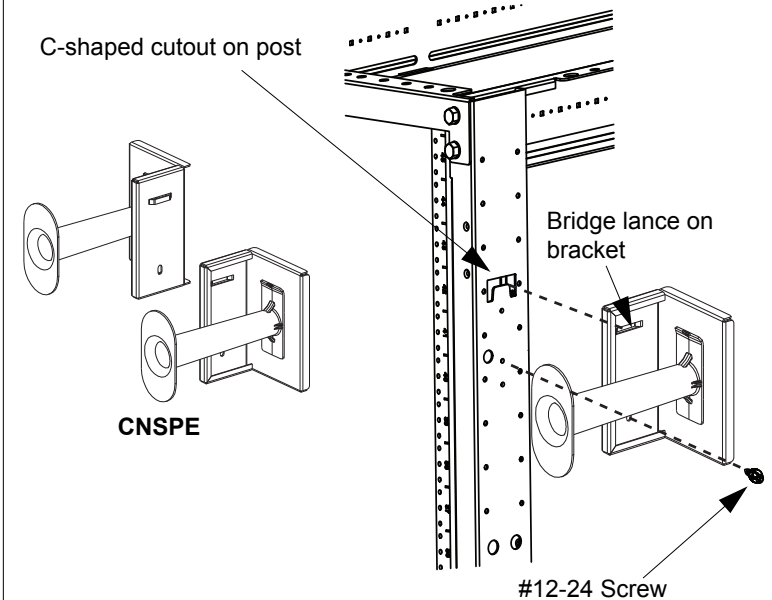

Fasten bridge lance on bracket to desired C-shaped cutout on post (both brackets), then secure with #12-24 screw.

For instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT

www.panduit.com

E-mail:

techsupport@panduit.com

Fax:

(866)405-6654