

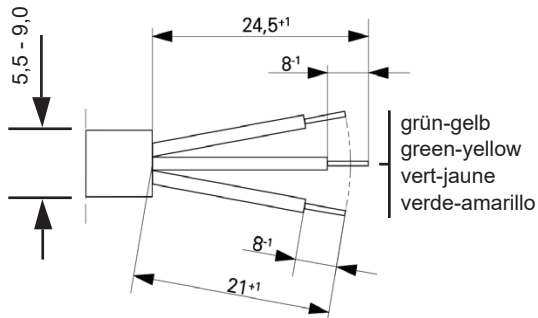



Steckverbinder AC  
Connectors AC  
Connecteurs AC  
Conectores AC

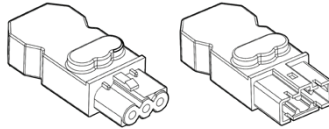


1. Adern einlegen, Kontaktschrauben anziehen  
Insert wires, tighten contact screws  
Insérer les fils, serrer les vis de contact  
Inserte los cables, apriete los tornillos de contacto

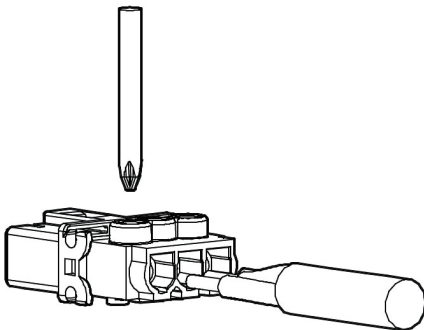

2. Zugentlastung anbringen  
Attach strain relief  
Fixer un dispositif de soulagement des contraintes  
Fijar el alivio de tensión

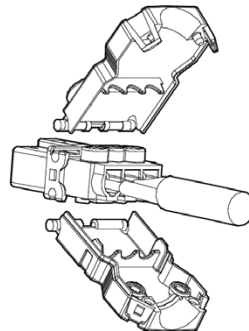

3. Zugentlastungsschrauben anziehen  
Tighten strain relief screws  
Serrer les vis de décharge de traction  
Apriete los tornillos de alivio de tensión

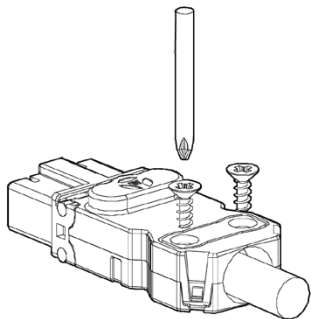

4. Entriegelung der Steckverbinder  
Unlocking the connectors  
Déverrouillage des connecteurs  
Desbloquear los conectores

