


Power Contactors for Switching Motors

Accessories and Spare Parts for SIRIUS 3RT Contactors and SIRIUS 3RH2 Contactor Relays Accessories

Terminal modules/adapters

	For con- tactors	Size	Version	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Type					d				
Single-phase infeed terminals									
	3RT204, 3RT244, 3RT264	S3	Conductor cross-section: 95 mm ²	2	3RA2943-3L		1	1 unit	41B
Three-phase infeed terminals									
Infeed terminal blocks for the line contactor for large conductor cross-sections									
	3RT201	S00	Max. conductor cross-section: up to 10 mm ² , AWG 12 ... 8	2	3RA2913-3K		1	10 units	41B
	3RT202	S0	Max. conductor cross-section: up to 25 mm ² , AWG 10 ... 2/0	▶	3RV2925-5AB		1	1 unit	41E
	3RT203	S2	Max. conductor cross-section: up to 70 mm ² , AWG 10 ... 2/0	▶	3RV2935-5A		1	1 unit	41E
Three-phase infeed terminals with increased clearances and creepage distances									
	3RT203	S2	Max. conductor cross-section: up to 70 mm ² , AWG 10 ... 2/0	▶	3RV2935-5E		1	1 unit	41E
Three-phase busbars									
	3RT202	S0	Bridging phase-by-phase of all input terminals of the line contactor (Q11) and delta contactor (Q13)	▶	3RV1915-1AB		1	1 unit	41E
Terminal blocks for connecting auxiliary conductors to main terminals									
Box terminal blocks									
For round and ribbon cables									
Connectable cross-sections of the contactors, see Technical specifications , page 3/52 .									
	3RT1.5	S6	• Up to 70 mm ² , as standard on 3RT1054-1 contactor (55 kW)	▶	3RT1955-4G		1	1 unit	41B
			• Up to 120 mm ²	▶	3RT1956-4G		1	1 unit	41B
	3RT1.6, 3RT1.7	S10, S12	• Up to 240 mm ² , With auxiliary conductor connection up to 2.5 mm ²	▶	3RT1966-4G		1	1 unit	41B
	3RT1.5	S6	Box terminal for auxiliary conductor connection, 1-pole for connection of auxiliary and control cables (0.5 ... 2.5 mm ²) to the main conductor terminals	5	3TX7500-0A		1	1 unit	41B
	3RT204	S3	Auxiliary terminals, 3-pole for connection of auxiliary and control cables (0.5 ... 2.5 mm ²) to the main conductor terminals	5	3RT2946-4F		1	1 unit	41B


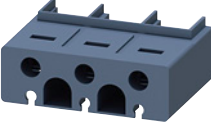
SIRIUS 3RW Soft Starters

Basic Performance Soft Starters

3RW40 Soft Starters

Accessories

Selection and ordering data

Conductor cross-section		Tightening torque	For soft starters size	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
Solid or stranded	Finely stranded with end sleeve								
mm ²	mm ²	AWG	Nm	d					
Three-phase infeed terminals									
	2.5 ... 25	2.5 ... 16	10 ... 4	3 ... 4	S0 (3RW402.)		1	1 unit	41E
Box terminal blocks for soft starters									
	For round and ribbon cables (2 units required for each device)								
	3RW405.	S6	• Up to 70 mm ² • Up to 120 mm ²	►	3RT1955-4G		1	1 unit	41B
				►	3RT1956-4G		1	1 unit	41B
			Auxiliary conductor connection for box terminals	5	3TX7500-0A		1	1 unit	41B
	3RW407.	S12	• Up to 240 mm ² (with auxiliary conductor connection)	►	3RT1966-4G		1	1 unit	41B
Auxiliary terminals									
	Auxiliary terminals, 3-pole								
	3RW404.	S3		5	3RT2946-4F		1	1 unit	41B
Covers for soft starters									
	Terminal covers for box terminals Additional touch protection to be fitted at the box terminals (2 units required per device)								
	3RW403.	S2		►	3RT2936-4EA2		1	1 unit	41B
	3RW404.	S3		►	3RT2946-4EA2		1	1 unit	41B
	3RW405.	S6		►	3RT1956-4EA2		1	1 unit	41B
	3RW407.	S12		2	3RT1966-4EA2		1	1 unit	41B
	Terminal covers for cable lugs and busbar connections								
	3RW404.	S3	For complying with the voltage clearances and as touch protection	5	3RT1946-4EA1		1	1 unit	41B
	3RW405.	S6	if box terminal is removed	►	3RT1956-4EA1		1	1 unit	41B
	3RW407.	S12	(2 units required per device)	2	3RT1966-4EA1		1	1 unit	41B
	Also fits in case of S6 and S12 on mounted box terminals								
	Sealing covers								
	3RW402. to 3RW404.	S0, S2, S3		5	3RW4900-0PB10		1	1 unit	42G
	3RW405. and 3RW407.	S6, S12		5	3RW4900-0PB00		1	1 unit	42G