

Motor Starter Protectors/Circuit Breakers

SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

Accessories

Mounting accessories

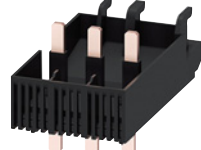
Link modules

Actuating voltage of contactor	Size 3RT2 contactors	3RV2 motor starter protectors/ circuit breakers	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
			d					

Link modules for motor starter protector to contactor¹⁾



3RA2921-1AA00



3RA2931-1AA00



3RA2911-2AA00



3RA2911-1CA00

For mechanical and electrical connection between motor starter protector and contactor with screw terminals

Single-unit packaging

AC/DC	S00	S00/S0	►
AC	S0	S00/S0	2
DC	S0	S00/S0	2
AC/DC	S2	S2	►
AC/DC	S3	S3	►

Multi-unit packaging

AC/DC	S00	S00/S0	►
AC	S0	S00/S0	2
DC	S0	S00/S0	2
AC/DC	S2	S2	►
AC/DC	S3	S3	►

Screw terminals



3RA1921-1DA00	1	1 unit	41B
3RA2921-1AA00	1	1 unit	41B
3RA2921-1BA00	1	1 unit	41B
3RA2931-1AA00	1	1 unit	41B
3RA1941-1AA00	1	1 unit	41B
3RA1921-1D	1	10 units	41B
3RA2921-1A	1	10 units	41B
3RA2921-1B	1	10 units	41B
3RA2931-1A	1	5 units	41B
3RA1941-1A	1	5 units	41B

For mechanical and electrical connection between motor starter protector and contactor with spring-type terminals

Single-unit packaging

AC/DC	S00	S00	►
AC ²⁾	S0	S0	►
DC	S0	S0	►

Multi-unit packaging

AC/DC	S00	S00	►
AC ²⁾	S0	S0	►
DC	S0	S0	►

Spring-type terminals



3RA2911-2AA00	1	1 unit	41B
3RA2921-2AA00	1	1 unit	41B
3RA2921-2AA00	1	1 unit	41B
3RA2911-2A	1	10 units	41B
3RA2921-2A	1	10 units	41B
3RA2921-2A	1	10 units	41B

Spacers²⁾

For compensating the height on AC contactors

Single-unit packaging	S0	S0	2
Multi-unit packaging	S0	S0	2

3RA2911-1CA00	1	1 unit	41B
3RA2911-1C	1	5 units	41B

¹⁾ The link modules for motor starter protector to contactor cannot be used for 3RV2.21-4PA1., 3RV2.21-4FA1., 3RV2.31-4K.1., 3RV2.31-4R.1., 3RV2.32-4K.1., 3RV2.32-4R.1., 3RV27, 3RV28 and 3RV1011 motor starter protectors/circuit breakers.

²⁾ A spacer for height compensation on AC contactors size S0 is optionally available.

Note:

Link modules can be used in

- Size S00: up to max. 16 A
- Size S0: up to max. 32 A
- Size S2: up to max. 65 A

Motor Starter Protectors/Circuit Breakers

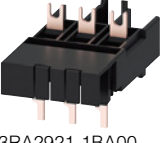
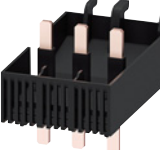
SIRIUS 3RV2 Motor Starter Protectors/Circuit Breakers

Accessories

Mounting accessories

Size	SD	Article No.	Price per PU	PU (UNIT, SET, M)	PS*	PG
3RW30, 3RW40 soft starters; 3RF34 solid-state contactors	3RV2 motor starter protectors/circuit breakers					
	d					

Link modules for motor starter protector to soft starter¹⁾ and motor starter protector to solid-state contactor¹⁾

 3RA2921-1BA00	Connection between motor starter protector and soft starter/ solid-state contactor with screw terminals			Screw terminals 			
	Single-unit packaging						
	S00	S00/S0	2	3RA2921-1BA00	1	1 unit	41B
	S0	S00/S0	2	3RA2921-1BA00	1	1 unit	41B
	S2 ²⁾	S2	▶	3RA2931-1AA00	1	1 unit	41B
 3RA2931-1AA00	Multi-unit packaging	S3 ³⁾	▶	3RA1941-1AA00	1	1 unit	41B
		S00	2	3RA2921-1B	1	10 units	41B
		S0	2	3RA2921-1B	1	10 units	41B
		S2 ²⁾	▶	3RA2931-1A	1	5 units	41B
		S3 ³⁾	▶	3RA1941-1A	1	5 units	41B
 3RA2921-2GA00	Connection between motor starter protector and soft starter with spring-type terminals			Spring-type terminals 			
	Single-unit packaging						
	S00	S00	2	3RA2911-2GA00	1	1 unit	41B
	S0	S0	2	3RA2921-2GA00	1	1 unit	41B

¹⁾ The link modules for motor starter protector to soft starter and motor starter protector to solid-state contactor cannot be used for 3RV2.21-4PA1., 3RV2.21-4FA1., 3RV2.31-4K.1., 3RV2.31-4R.1., 3RV2.32-4K.1., 3RV2.32-4R.1., 3RV27, 3RV28 and 3RV1011 motor starter protectors/circuit breakers.

²⁾ To assemble the feeder between a motor starter protector and a soft starter in size S2, the 3RA2932-1CA00 standard mounting rail adapter must be used.

³⁾ It is only permissible to assemble the feeder between the motor starter protector and the soft starter in size S3 on a mounting plate.

Note:

Link modules can be used in

- Size S00: up to max. 16 A
- Size S0: up to max. 32 A
- Size S2: up to max. 65 A